

Revision B:

- MUZ-FE09NA - 1 and MUZ-FE12NA1 have been added.

Please void OBH543 REVISED EDITION-A.

OUTDOOR UNIT SERVICE MANUAL




**No. OBH543
REVISED EDITION-B**

Models

**MUZ-FE09NA
MUZ-FE12NA
MUZ-FE18NA**

**MUZ-FE09NA - 1
MUZ-FE12NA1**

Indoor unit service manual
MSZ-FE•NA Series (OBH542)

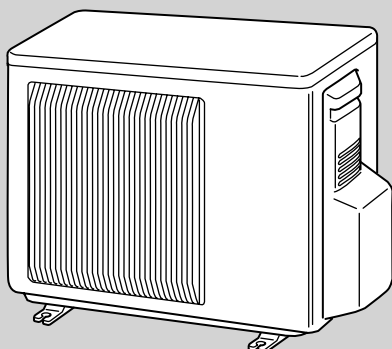

**MUZ-FE09NA MUZ-FE09NA - 1
MUZ-FE12NA MUZ-FE12NA1**

CONTENTS

1. TECHNICAL CHANGES	2
2. PART NAMES AND FUNCTIONS.....	3
3. SPECIFICATION	4
4. OUTLINES AND DIMENSIONS	6
5. WIRING DIAGRAM.....	7
6. REFRIGERANT SYSTEM DIAGRAM	9
7. DATA	11
8. ACTUATOR CONTROL	18
9. SERVICE FUNCTIONS	19
10. TROUBLESHOOTING	19
11. DISASSEMBLY INSTRUCTIONS	38

PARTS CATALOG (OBB543)

NOTE:

RoHS compliant products have <G> mark on the spec name plate.

Mr. SLIM™

Use the specified refrigerant only

Never use any refrigerant other than that specified.

Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of.

Correct refrigerant is specified in the manuals and on the spec labels provided with our products.

We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.

Revision A:

- MUZ-FE18NA has been added.

Revision B:

- MUZ-FE09NA -  and MUZ-FE12NA1 have been added.

1

TECHNICAL CHANGES

MUZ-FE09NA

MUZ-FE12NA

MUZ-FE18NA


1. New model

MUZ-FE09NA → MUZ-FE09NA - 


MUZ-FE12NA → MUZ-FE12NA1

1. Compressor has been changed.
2. Inverter P.C. board has been changed.

MUZ-FE09NA MUZ-FE12NA MUZ-FE12NA1

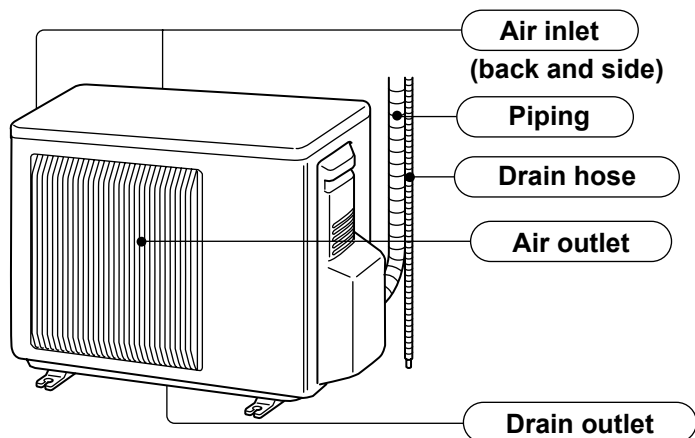

MUZ-FE18NA

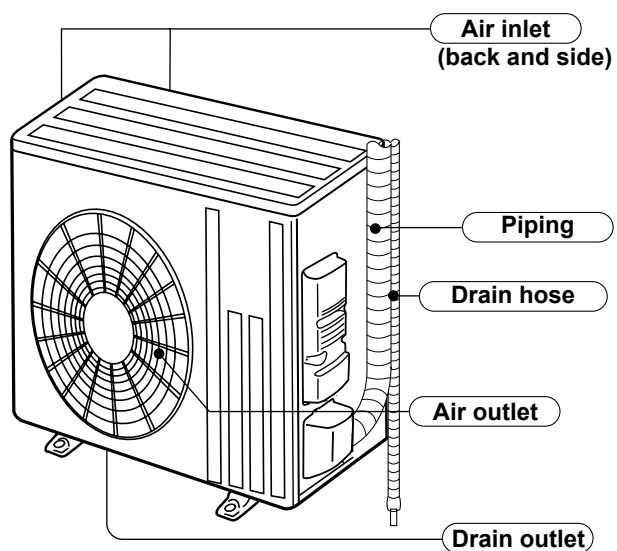

Outdoor unit model			MUZ-FE09NA	MUZ-FE12NA MUZ-FE12NA1	MUZ-FE18NA
Capacity Rated (Minimum~Maximum)	Cooling ※1	Btu/h	9,000 (2,800~9,000)	12,000 (2,800~12,000)	
	Heating 47 ※1	Btu/h	10,900 (3,000~18,000)	13,600 (3,000~21,000)	
Capacity Rated	Heating 17 ※2	Btu/h	12,500	13,600	
Power consumption Rated (Minimum~Maximum)	Cooling ※1	W	580 (160~650)	930 (160~960)	
	Heating 47 ※1	W	710 (150~2,250)	950 (150~2,250)	
Power consumption Rated	Heating 17 ※2	W	1,730	1,780	
EER ※1 [SEER] ※3	Cooling		15.5 [26.0]	12.9 [23.0]	
HSPF IV ※4	Heating		10.0	MUZ-FE12NA	10.6
				MUZ-FE12NA1	10.5
COP	Heating ※1		4.50	4.20	
Power supply	V , phase , Hz		208/230, 1 , 60		
Max. fuse size (time delay)		A	15		20
Min. circuit ampacity		A	12		17.1
Fan motor		F.L.A	0.56		0.93
Compressor	Model		MUZ-FE09NA MUZ-FE12NA MUZ-FE09NA - ☐ 1 MUZ-FE12NA1	SNB130FQAH	SNB172FQKMT
				SNB130FQBHT	
	R.L.A		8.6		12.9
	L.R.A		10.8		16.1
	Refrigeration oil L (Model)		0.45 (NEO22)		0.40 (FV50S)
Refrigerant control			Linear expansion valve		
Sound level ※1	Cooling	dB(A)	48	48	55
	Heating	dB(A)	49	49	55
Defrost method			Reverse cycle		
Dimensions	W	in.	31-1/2		33-1/16
	D	in.	11-1/4		13
	H	in.	21-5/8		34-5/8
Weight	lb.		80		119
External finish			Munsell 3Y 7.8/1.1		
Remote controller			Wireless type		
Control voltage (by built-in transformer)		VDC	12 - 24		
Refrigerant piping			Not supplied		
Refrigerant pipe size (Min. wall thickness)	Liquid	in.	1/4 (0.0315)		3/8 (0.0315)
	Gas	in.	3/8 (0.0315)		5/8 (0.0315)
Connection method	Indoor		Flared		Flared
	Outdoor		Flared		Flared
Between the indoor & outdoor units	Height difference	ft.	40		50
	Piping length	ft.	65		100
Refrigerant charge (R410A)			2 lb. 9 oz.		4 lb. 3 oz.

NOTE: Test conditions are based on AHRI 210/240.

※1: Rating conditions (Cooling) — Indoor: 80°FDB, 67°FWB, Outdoor: 95°FDB, (75°FWB) Rated frequency
 (Heating) — Indoor: 70°FDB, 60°FWB, Outdoor: 47°FDB, 43°FWB Rated frequency
 ※2: (Heating) — Indoor: 70°FDB, 60°FWB, Outdoor: 17°FDB, 15°FWB Maximum frequency

Test condition

※3,※4

ARI	Mode	Test	Indoor air condition (°F)		Outdoor air condition (°F)	
			Dry bulb	Wet bulb	Dry bulb	Wet bulb
	SEER (Cooling)	"A-2" Cooling Steady State at rated compressor Speed	80	67	95	(75)
		"B-2" Cooling Steady State at rated compressor Speed	80	67	82	(65)
		"B-1" Cooling Steady State at minimum compressor Speed	80	67	82	(65)
		"F-1" Cooling Steady State at minimum compressor Speed	80	67	67	(53.5)
		"E-V" Cooling Steady State at Intermediate compressor Speed ※5	80	67	87	(69)
	HSPF (Heating)	"H1-2" Heating Steady State at rated compressor Speed	70	60	47	43
		"H3-2" Heating at rated compressor Speed	70	60	17	15
		"H0-1" Heating Steady State at minimum compressor Speed	70	60	62	56.5
		"H1-1" Heating Steady State at minimum compressor Speed	70	60	47	43
		"H2-V" Heating at Intermediate compressor Speed ※5	70	60	35	33

※5: At Intermediate compressor Speed
= ("Cooling rated compressor speed" - "minimum compressor speed") / 3 + "minimum compressor speed".

OPERATING RANGE


(1) POWER SUPPLY

	Rated voltage	Guaranteed voltage (V)
Outdoor unit	208/230 V 1 phase 60 Hz	Min. 187 208 230 Max. 253



(2) OPERATION

Mode	Condition	Intake air temperature (°F)			
		Indoor		Outdoor	
		DB	WB	DB	WB
Cooling	Standard temperature	80	67	95	—
	Maximum temperature	90	73	115	—
	Minimum temperature	67	57	14	—
	Maximum humidity	78 %		—	
Heating	Standard temperature	70	60	47	43
	Maximum temperature	80	67	75	65
	Minimum temperature	70	60	-13	-15

Unit: inch




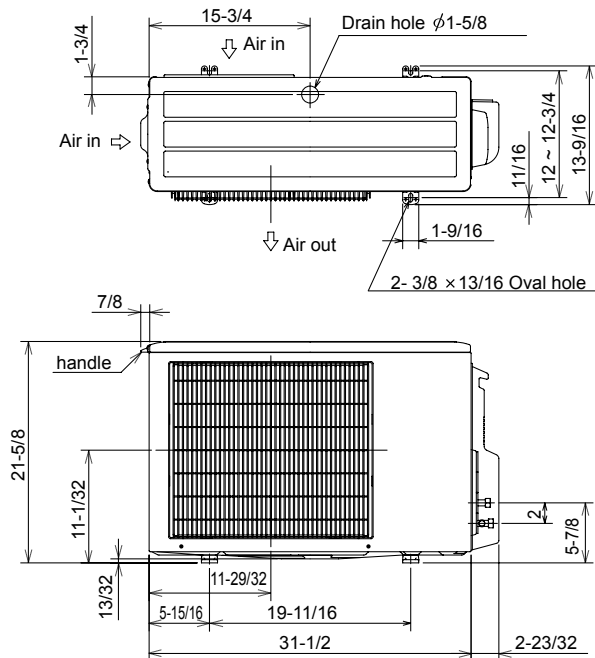


REQUIRED SPACE

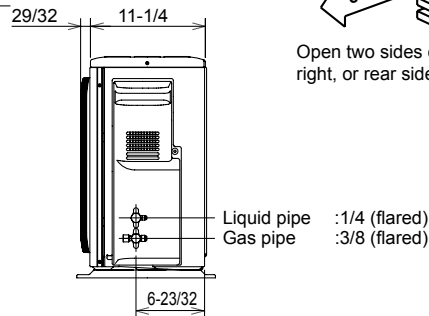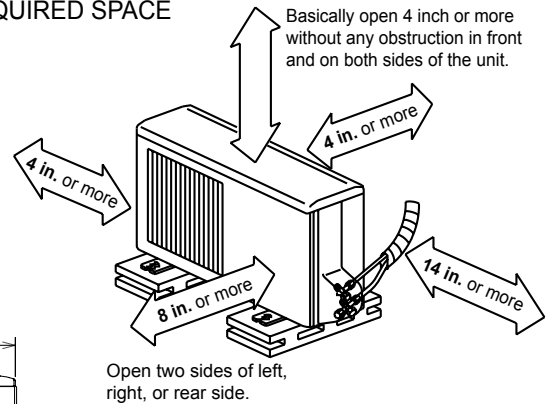


MUZ-FE18NA


REQUIRED SPACE

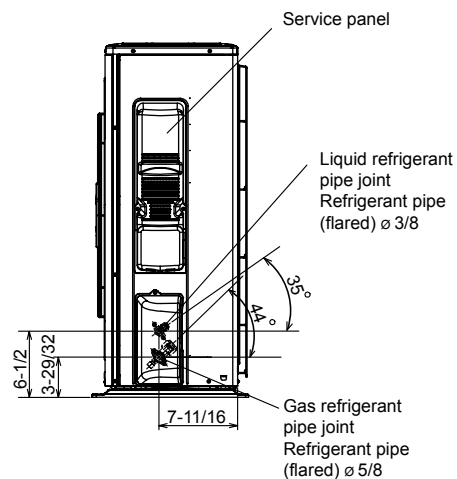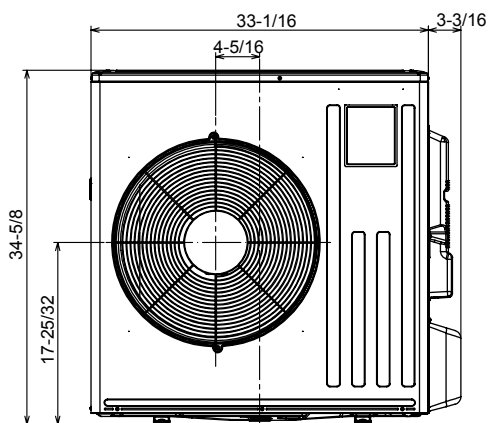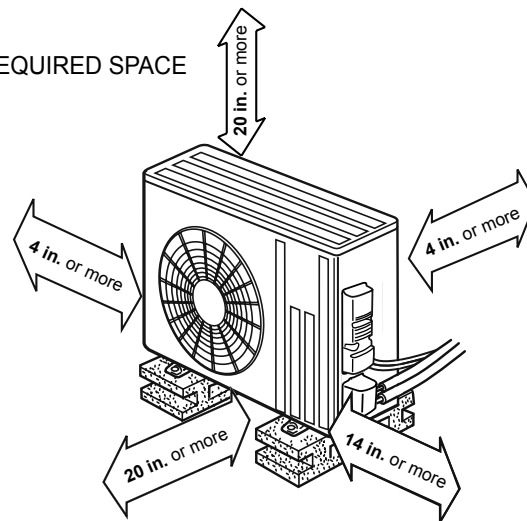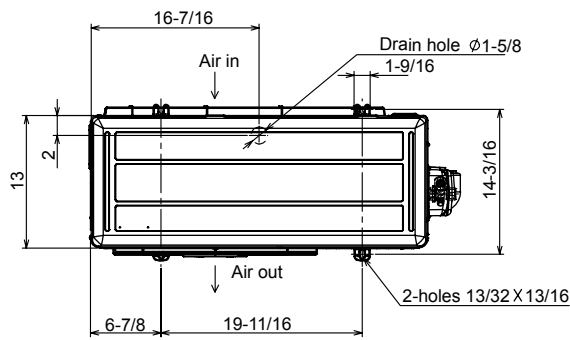


MUZ-FE09NA MUZ-FE12NA

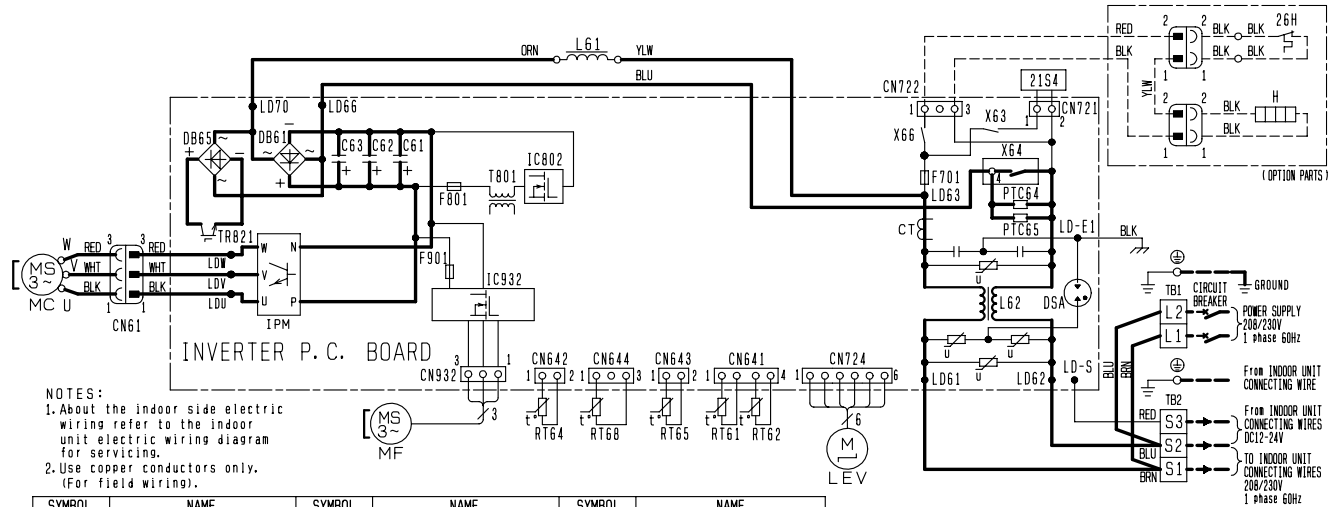

MUZ-FE09NA - 1 MUZ-FE12NA1

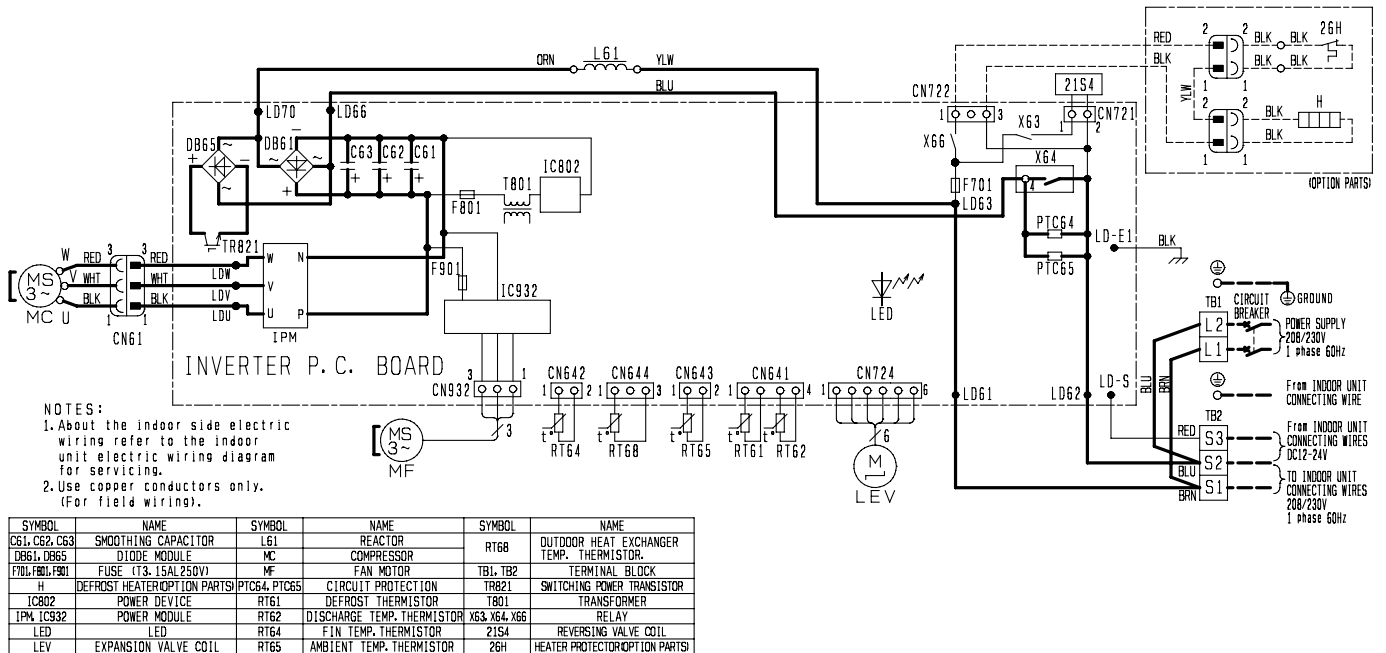




NOTES


1. About the indoor side electric wiring, refer to the indoor unit electric wiring diagram for servicing.
2. Use copper conductors only (for field wiring).
3. Symbols indicate, : Terminal block

MUZ-FE09NA MUZ-FE12NA MUZ-FE12NA1

Unit: inch

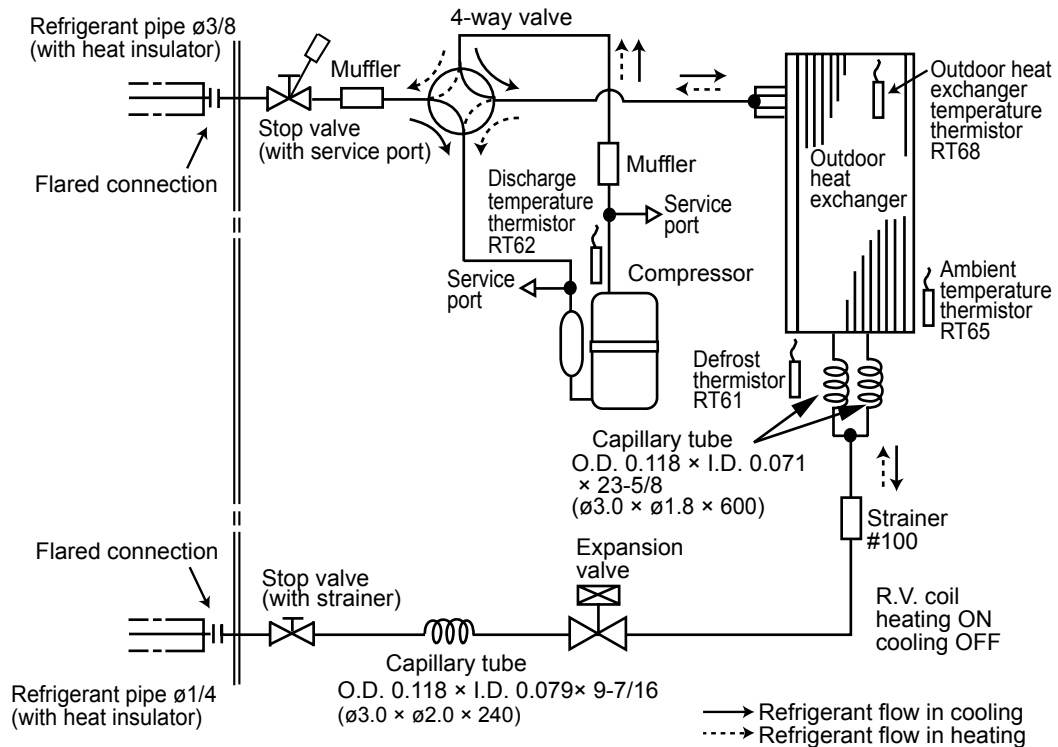


MUZ-FE18NA

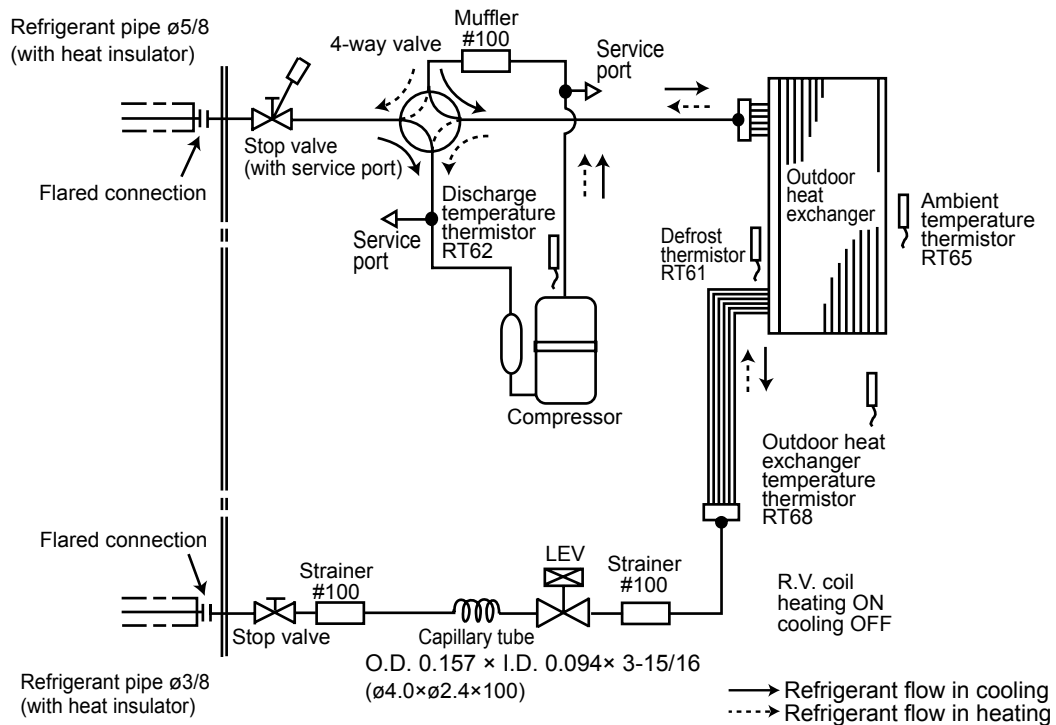

MAX. REFRIGERANT PIPING LENGTH and MAX. HEIGHT DIFFERENCE

Model	Refrigerant piping: ft.		Piping size O.D: in.	
	Max. Length A	Max. Height difference B	Gas	Liquid
MUZ-FE09NA MUZ-FE12NA MUZ-FE12NA1	65	40	3/8	1/4
MUZ-FE18NA	100	50	5/8	3/8

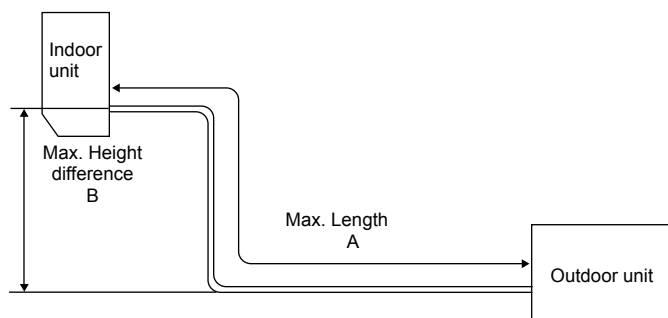

ADDITIONAL REFRIGERANT CHARGE (R410A: oz.)

NOTE: Refrigerant piping exceeding 25 ft. requires additional refrigerant charge according to the calculation.

Model	Outdoor unit precharged	Refrigerant piping length (one way): ft.					
		25	30	40	50	60	65
MUZ-FE09NA MUZ-FE12NA MUZ-FE12NA1	2 lb. 9 oz.	0	1.62	4.86	8.10	11.34	12.96

Calculation: X oz. = 1.08/5 oz. / ft. × (Refrigerant piping length (ft.) - 25)

NOTE: Refrigerant piping exceeding 33 ft. requires additional refrigerant charge according to the calculation.

Model	Outdoor unit precharged	Refrigerant piping length (one way): ft.							
		33	40	50	60	70	80	90	100
MUZ-FE18NA	4 lb. 3 oz.	0	4.14	10.06	15.98	21.90	27.82	33.74	39.66

Calculation: X oz. = 2.96/5 oz. / ft. × (Refrigerant piping length (ft.) - 33)

MUZ-FE09NA MUZ-FE12NA MUZ-FE12NA1 MUZ-FE18NA

7-1. PERFORMANCE DATA

1) COOLING CAPACITY

Model	Indoor air	Outdoor intake air DB temperature (°F)														
	IWB (°F)	75			85			95			105			115		
		TC	SHC	TPC	TC	SHC	TPC	TC	SHC	TPC	TC	SHC	TPC	TC	SHC	TPC
MUZ-FE09NA	71	11.0	6.9	0.58	10.3	6.5	0.63	9.7	6.1	0.68	9.0	5.6	0.72	8.3	5.2	0.75
	67	10.4	7.9	0.55	9.7	7.4	0.60	9.0	6.8	0.65	8.4	6.4	0.69	7.7	5.8	0.72
	63	9.8	8.8	0.52	9.1	8.1	0.58	8.5	7.6	0.62	7.7	6.9	0.66	7.0	6.3	0.69
MUZ-FE12NA MUZ-FE12NA1	71	14.7	8.8	0.85	13.7	8.2	0.94	12.9	7.7	1.01	12.0	7.2	1.06	11.0	6.6	1.10
	67	13.9	10.2	0.81	13.0	9.5	0.89	12.0	8.8	0.96	11.2	8.1	1.02	10.3	7.5	1.07
	63	13.1	11.3	0.77	12.1	10.5	0.85	11.3	9.7	0.92	10.3	8.9	0.98	9.4	8.1	1.02
MUZ-FE18NA	71	22.1	15.6	1.13	20.6	14.6	1.24	19.4	13.7	1.33	18.0	12.7	1.40	16.6	11.7	1.46
	67	20.9	17.5	1.07	19.4	16.3	1.17	18.0	15.1	1.27	16.7	14.1	1.35	15.4	12.9	1.41
	63	19.6	19.1	1.02	18.2	17.7	1.12	16.9	16.5	1.21	15.4	15.0	1.30	14.0	13.7	1.35

NOTE: 1. IWB : Intake air wet-bulb temperature

TC : Total Capacity ($\times 10^3$ Btu/h)

SHC : Sensible Heat Capacity ($\times 10^3$ Btu/h)

TPC : Total Power Consumption (kW)

2. SHC is based on 80°F of indoor Intake air DB temperature.

2) COOLING CAPACITY CORRECTIONS

Refrigerant piping length (one way: ft.)				
	25 (std.)	40	65	100
MUZ-FE09NA MUZ-FE12NA MUZ-FE12NA1	1.0	0.954	0.878	-
MUZ-FE18NA	1.0	0.954	0.878	0.771

3) HEATING CAPACITY

Model	Indoor air	Outdoor intake air WB temperature (°F)													
	IDB (°F)	5		15		25		35		43		45		55	
		TC	TPC	TC	TPC	TC	TPC	TC	TPC	TC	TPC	TC	TPC	TC	TPC
MUZ-FE09NA	75	4.8	0.44	6.3	0.56	7.9	0.66	9.4	0.73	10.6	0.77	11.0	0.78	12.4	0.81
	70	5.2	0.42	6.7	0.54	8.2	0.64	9.6	0.71	10.9	0.75	11.2	0.77	12.7	0.80
	65	5.5	0.41	6.9	0.52	8.6	0.62	10.0	0.69	11.2	0.73	11.6	0.74	13.0	0.78
MUZ-FE12NA MUZ-FE12NA1	75	6.0	0.58	7.9	0.73	9.9	0.86	11.8	0.96	13.3	1.00	13.7	1.02	15.5	1.06
	70	6.5	0.55	8.4	0.71	10.2	0.84	12.0	0.93	13.6	0.98	14.0	1.00	15.8	1.04
	65	6.8	0.53	8.6	0.68	10.7	0.81	12.4	0.91	14.0	0.96	14.4	0.97	16.2	1.02
MUZ-FE18NA	75	9.5	0.91	12.5	1.15	15.7	1.35	18.7	1.50	21.1	1.58	21.7	1.60	24.6	1.66
	70	10.3	0.87	13.3	1.11	16.2	1.32	19.1	1.46	21.6	1.54	22.2	1.57	25.2	1.63
	65	10.8	0.83	13.6	1.06	17.0	1.27	19.8	1.42	22.2	1.50	22.9	1.52	25.7	1.60

NOTE: 1. IDB : Intake air dry-bulb temperature

TC : Total Capacity ($\times 10^3$ Btu/h)

TPC : Total Power Consumption (kW)


2. Above data is for heating operation without any frost.

How to operate with fixed operational frequency of the compressor.


1. Press the EMERGENCY OPERATION switch on the front of the indoor unit, and select either EMERGENCY COOL mode or EMERGENCY HEAT mode before starting to operate the air conditioner.
2. The compressor starts with operational frequency.
3. The fan speed of the indoor unit is High.
4. This operation continues for 30 minutes.
5. In order to release this operation, press the EMERGENCY OPERATION switch twice or once, or press any button on the remote controller.

7-2. PERFORMANCE CURVE


Cooling

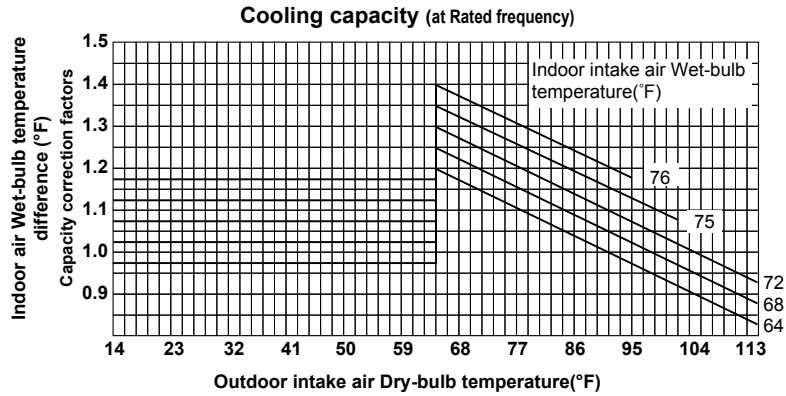


MUZ-FE09NA

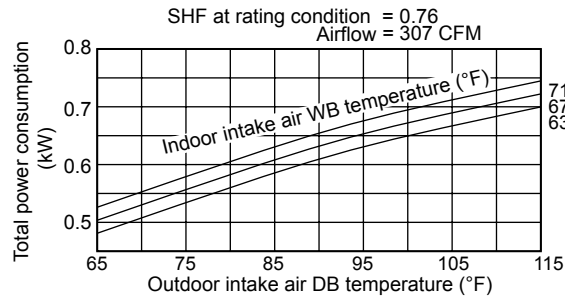

MUZ-FE12NA MUZ-FE12NA1

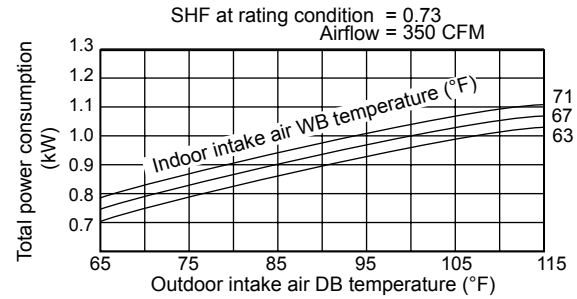


MUZ-FE18NA

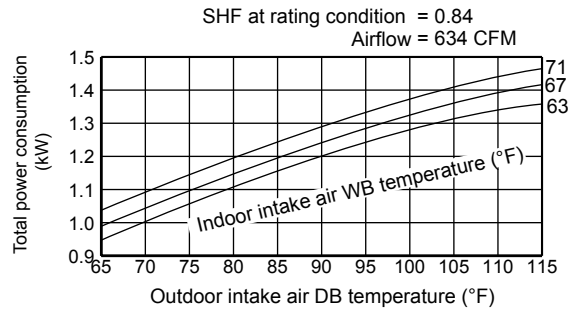


This value of frequency is not the same as the actual frequency in operating. Refer to 7-5 and 7-6 for the relationships between frequency and capacity.


Heating

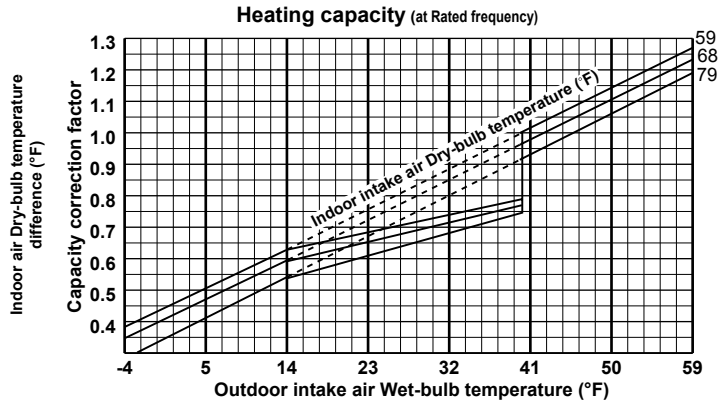


MUZ-FE09NA

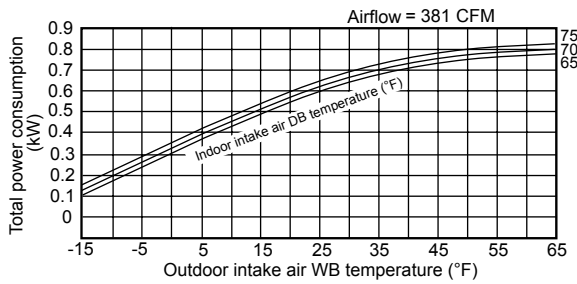

MUZ-FE12NA MUZ-FE12NA1

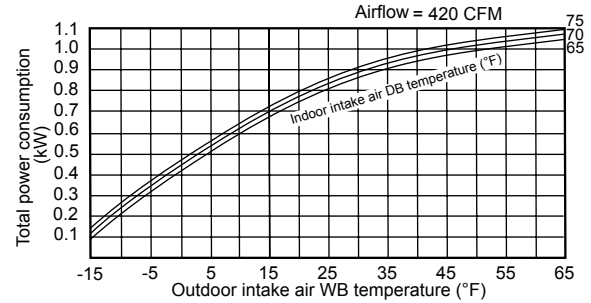

MUZ-FE18NA

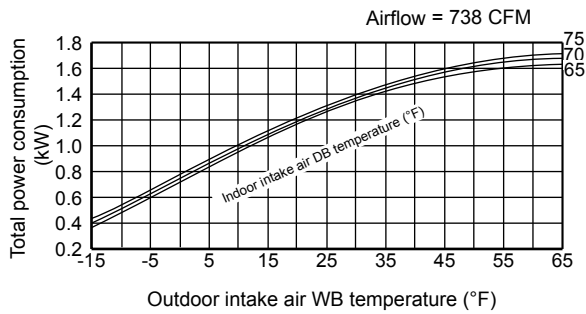

This value of frequency is not the same as the actual frequency in operating. Refer to 7-5 and 7-6 for the relationships between frequency and capacity.



7-3. CONDENSING PRESSURE

Cooling



Data is based on the condition of indoor humidity 50 %.

Air flow should be set to High speed.



MUZ-FE09NA

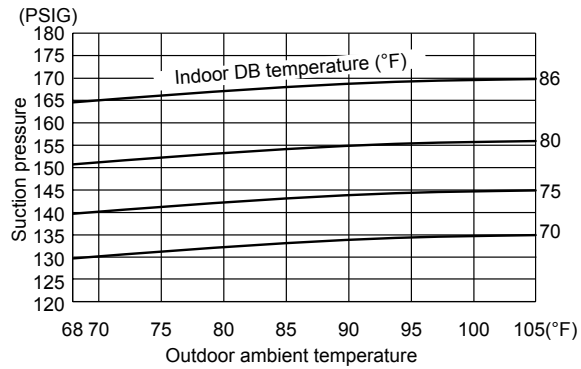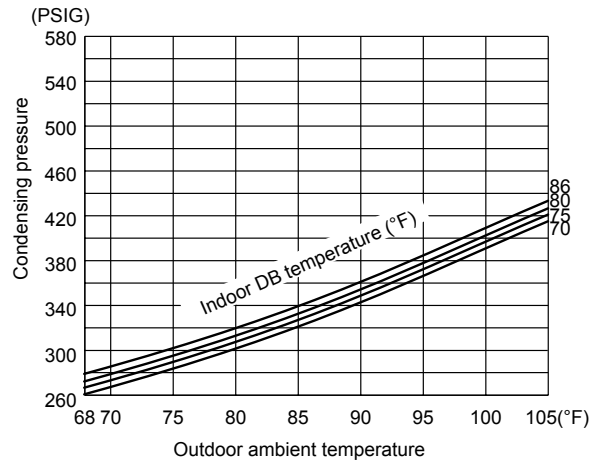

MUZ-FE12NA MUZ-FE12NA1

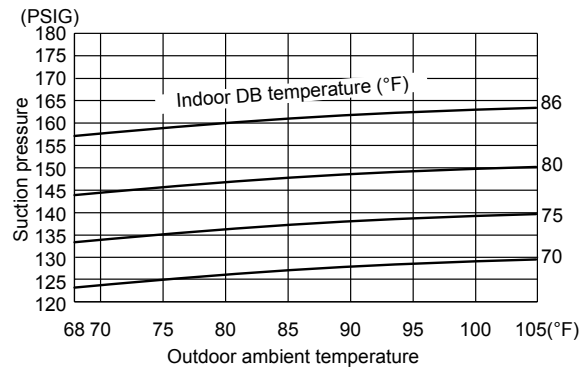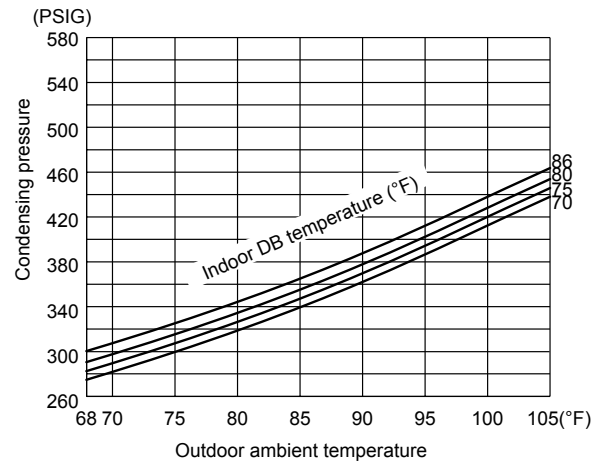

MUZ-FE18NA

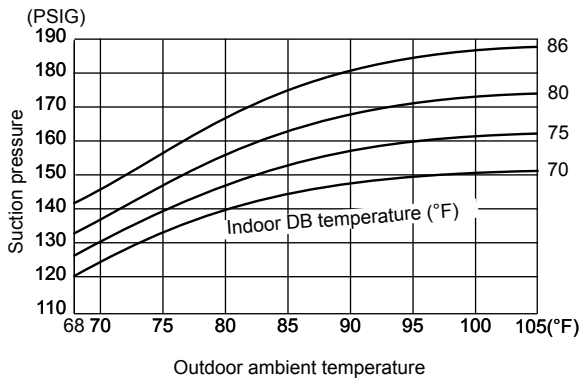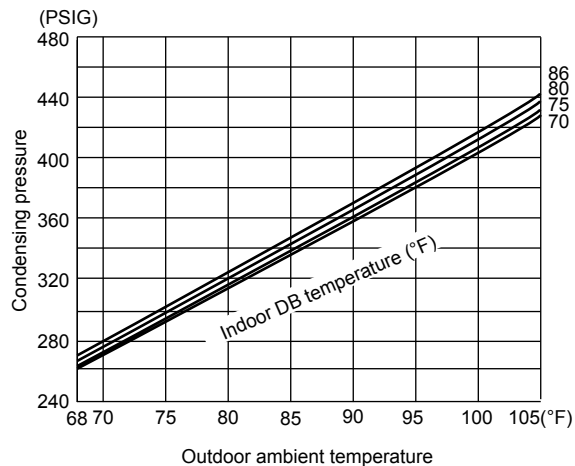



Heating

Data is based on the condition of outdoor humidity 75%.



Air flow should be set to High speed.

Data is for heating operation without any frost.



MUZ-FE09NA

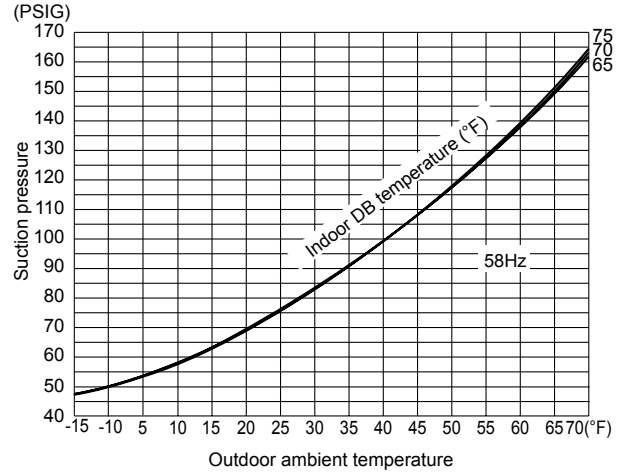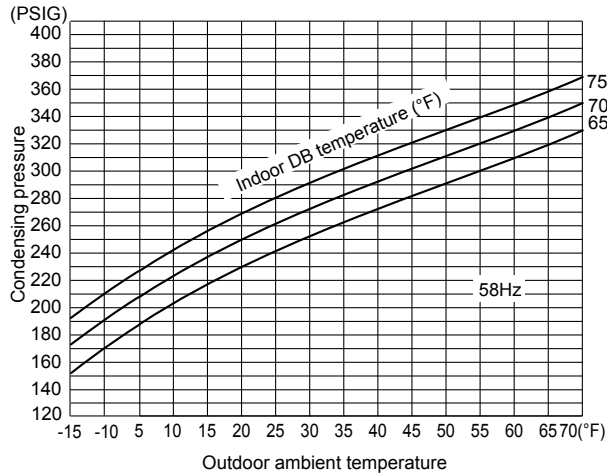

MUZ-FE12NA MUZ-FE12NA1

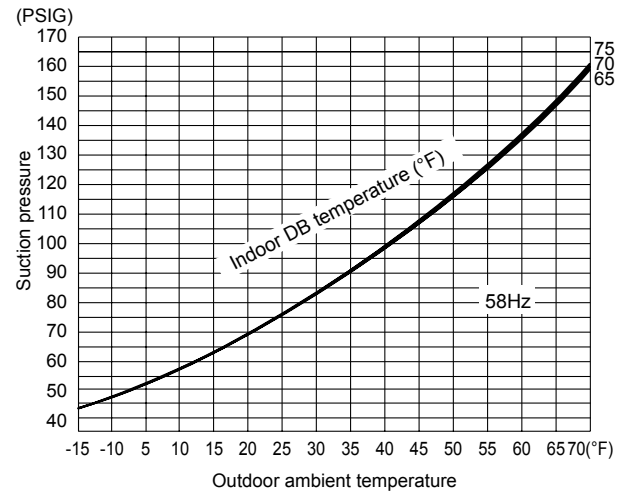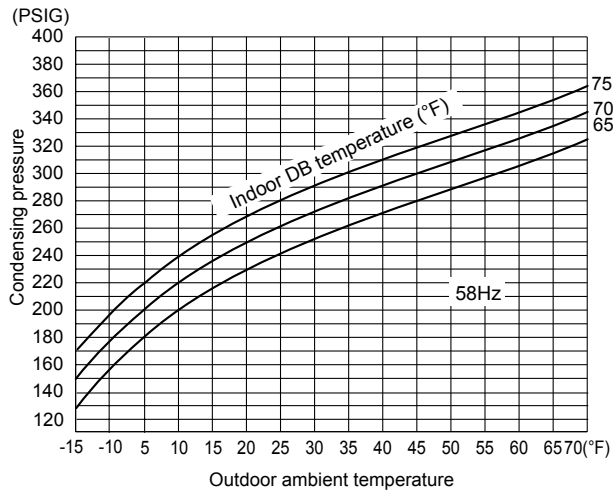

MUZ-FE18NA

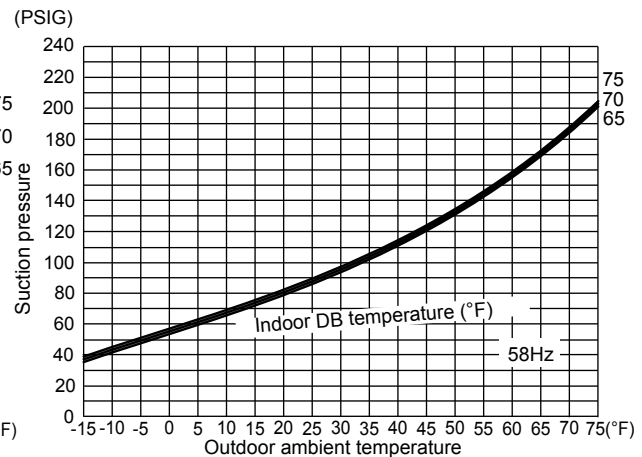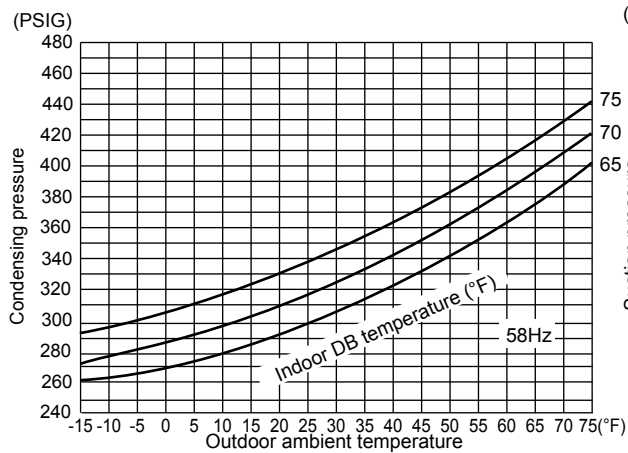


7-4. STANDARD OPERATION DATA


Model				MSZ-FE09NA		MSZ-FE12NA		MSZ-FE18NA	
Item			Unit	Cooling	Heating	Cooling	Heating	Cooling	Heating
Total	Capacity		Btu/h	9,000	10,900	12,000	13,600	18,000	21,600
	SHF		—	0.76	—	0.73	—	0.84	—
	Input		kW	0.580	0.710	0.930	0.950	1.800	2.200
	Rated frequency		Hz	34	42	51	52.5	50.5	62.5
Electrical circuit	Indoor unit			MSZ-FE09NA		MSZ-FE12NA		MSZ-FE18NA	
	Power supply		V, phase, Hz	208/230, 1, 60					
	Input		kW	0.018	0.024	0.024	0.030	0.058	
	Fan motor current		A	0.19/0.17	0.25/0.23	0.25/0.23	0.32/0.29	0.56/0.51	
	Outdoor unit			MUZ-FE09NA		MUZ-FE12NA MUZ-FE12NA1		MUZ-FE18NA	
	Power supply		V, phase, Hz	208/230, 1, 60					
	Input		kW	0.562	0.686	0.906	0.920	1.212	1.482
	Comp. current		A	2.38/2.15	2.98/2.70	4.05/3.66	4.12/3.72	4.47/4.04	5.72/5.17
	Fan motor current		A	0.35/0.32					1.16/1.05
Refrigerant circuit	Condensing pressure		PSIG	376	355	402	392	373	357
	Suction pressure		PSIG	154	108	148	104	151	107
	Discharge temperature		°F	142	145	160	158	150	159
	Condensing temperature		°F	112	108	117	115	111	105
	Suction temperature		°F	53	36	53	34	58	41
	Comp. shell bottom temperature		°F	144	128	146	129	132	136
	Ref. pipe length		ft.	25					
	Refrigerant charge (R410A)			2 lb. 9 oz.				4 lb 3 oz.	
Indoor unit	Intake air temperature	DB	°F	80	70	80	70	80	70
		WB	°F	67	60	67	60	67	60
	Discharge air temperature	DB	°F	59	99	58	101	59	102
		WB	°F	56	—	55	—	56	—
	Fan speed (High)		rpm	1,020	1,120	1,120	1,220	1,300	
	Airflow (High)		CFM	307 (Wet)	381	350 (Wet)	420	634 (Wet)	738
Outdoor unit	Intake air temperature	DB	°F	95	47	95	47	95	47
		WB	°F	—	43	—	43	—	43
	Fan speed		rpm	810	870	810	870	840	810
	Airflow		CFM	1,102	1,187	1,102	1,187	1,769	1,701

7-5. CAPACITY AND INPUT CORRECTION BY INVERTER OUTPUT FREQUENCY


MUZ-FE09NA

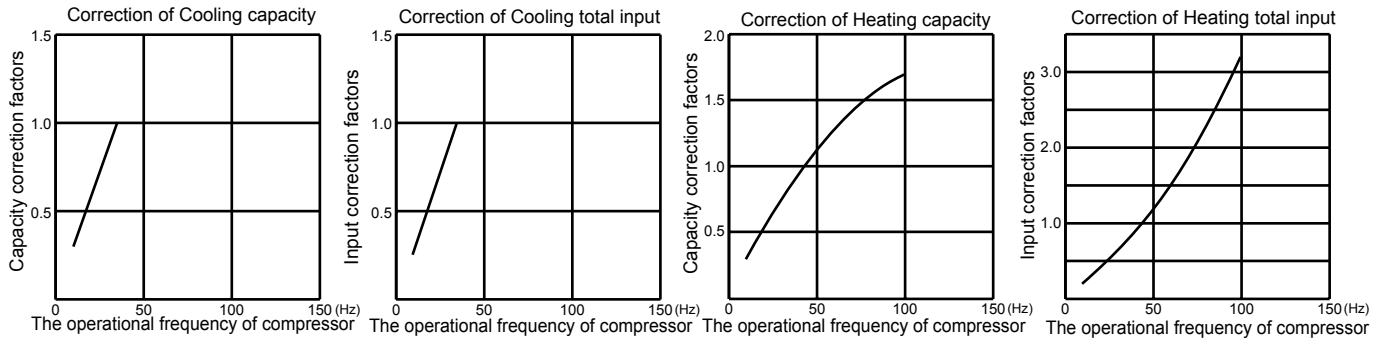

MUZ-FE12NA MUZ-FE12NA1

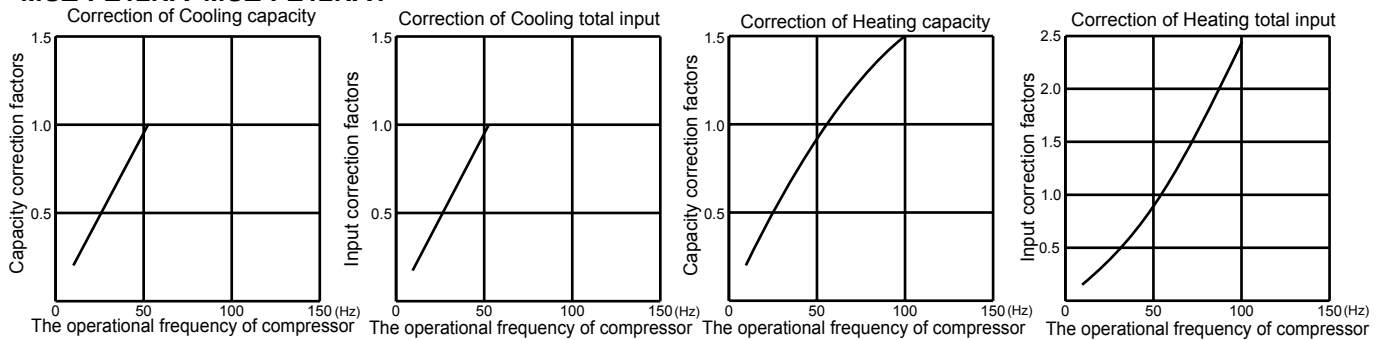

MUZ-FE18NA

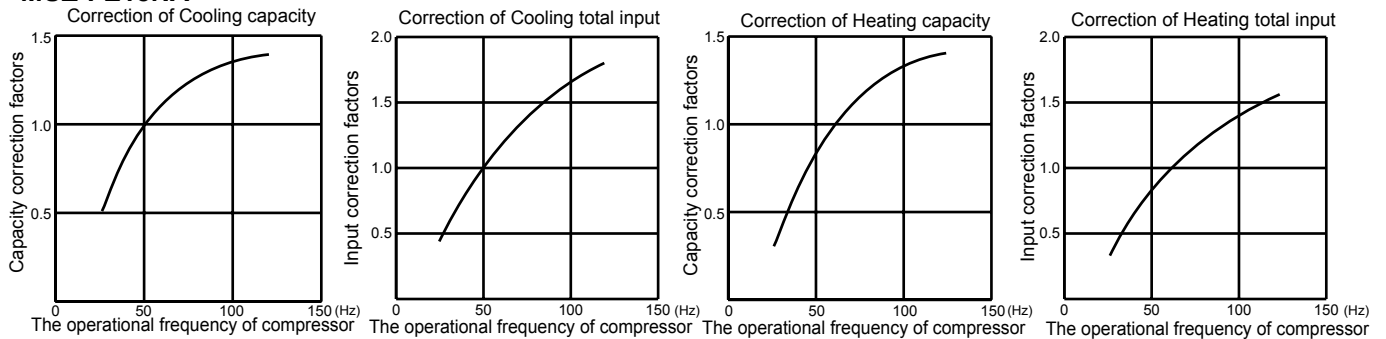

7-6. HOW TO OPERATE FIXED-FREQUENCY OPERATION (Test run operation)


1. Press EMERGENCY OPERATION switch to start COOL or HEAT mode (COOL: Press once, HEAT: Press twice).
2. Test run operation starts and continues to operate for 30 minutes.
3. Compressor operates at rated frequency in COOL mode or 58 Hz in HEAT mode.
4. Indoor fan operates at High speed.
5. After 30 minutes, test run operation finishes and EMERGENCY OPERATION starts (operation frequency of compressor varies).
6. To cancel test run operation (EMERGENCY OPERATION), press EMERGENCY OPERATION switch or any button on remote controller.

MUZ-FE09NA MUZ-FE12NA MUZ-FE12NA1 MUZ-FE18NA**8-1. OUTDOOR FAN MOTOR CONTROL**

The fan motor turns ON/OFF, interlocking with the compressor.

[ON] The fan motor turns ON 5 seconds before the compressor starts up.

[OFF] The fan motor turns OFF 15 seconds after the compressor has stopped running.

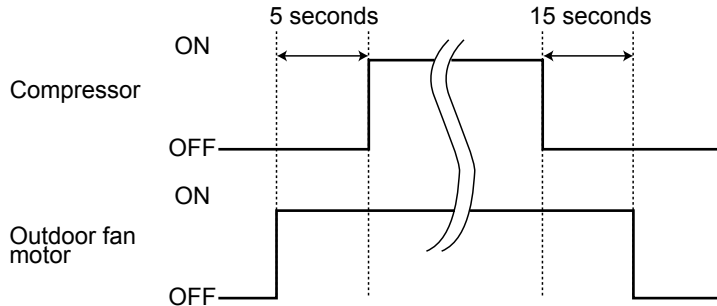
**8-2. R.V. COIL CONTROL**

Heating ON

Cooling OFF

Dry OFF

NOTE: The 4-way valve reverses for 5 seconds right before start-up of the compressor.

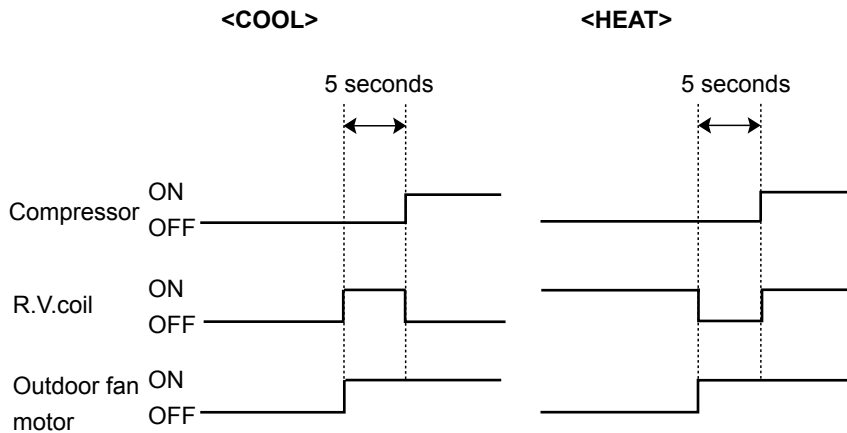**8-3. RELATION BETWEEN MAIN SENSOR AND ACTUATOR**

Sensor	Purpose	Actuator				
		Compressor	LEV	Outdoor fan motor	R.V. coil	Indoor fan motor
Discharge temperature thermistor	Protection	○	○			
Indoor coil temperature thermistor	Cooling: Coil frost prevention	○				
	Heating: High pressure protection	○	○			
Defrost thermistor	Cooling: High pressure protection	○	○			
	Heating: Defrosting	○	○	○	○	○
Fin temperature thermistor	Protection	○		○		
Outdoor heat exchanger temperature thermistor	High pressure protection	○	○	○		
Ambient temperature thermistor	Low ambient temperature operation	○	○	○		

9

SERVICE FUNCTIONS

MUZ-FE09NA MUZ-FE12NA MUZ-FE12NA1 MUZ-FE18NA

9-1. CHANGE IN DEFROST SETTING

Changing defrost finish temperature

<JS> To change the defrost finish temperature, cut/solder the JS wire of the outdoor inverter P.C. board (Refer to 10-6.1.).

Jumper		Defrost finish temperature	
		MUZ-FE09/12NA MUZ-FE12NA1	MUZ-FE18NA
JS	Soldered (Initial setting)	41°F (5°C)	50°F (10°C)
	None (Cut)	50°F (10°C)	64°F (18°C)

9-2. PRE-HEAT CONTROL SETTING

PRE-HEAT CONTROL

When moisture gets into the refrigerant cycle, it may interfere the start-up of the compressor at low outside temperature. The pre-heat control prevents this interference. The pre-heat control turns ON when outside temperature is 68°F (20°C) or below. When pre-heat control is turned ON, compressor is energized. (About 50 W)

<JK> To activate the pre-heat control, cut the JK wire of the inverter P.C. board (Refer to 10-6.1.).

NOTE: When the inverter P.C. board is replaced, check the Jumper wires, and cut/solder them if necessary.

10

TROUBLESHOOTING

MUZ-FE09NA MUZ-FE12NA MUZ-FE12NA1 MUZ-FE18NA

10-1. CAUTIONS ON TROUBLESHOOTING


1. Before troubleshooting, check the following

- 1) Check the power supply voltage.
- 2) Check the indoor/outdoor connecting wire for miswiring.

2. Take care of the following during servicing


- 1) Before servicing the air conditioner, be sure to turn OFF the main unit first with the remote controller, then after confirming the horizontal vane is closed, turn off the breaker and/or disconnect the power plug.
- 2) Be sure to turn OFF the power supply before removing the front panel, the cabinet, the top panel, and the electronic control P.C. board.
- 3) When removing the electrical parts, be careful of the residual voltage of smoothing capacitor.
- 4) When removing the electronic control P.C. board, hold the edge of the board with care NOT to apply stress on the components.
- 5) When connecting or disconnecting the connectors, hold the housing of the connector. DO NOT pull the lead wires.

<Incorrect>



Lead wiring

<Correct>



Housing point

3. Troubleshooting procedure

- 1) First, check if the OPERATION INDICATOR lamp on the indoor unit is flashing on and off to indicate an abnormality. To make sure, check how many times the OPERATION INDICATOR lamp is flashing on and off before starting service work.
- 2) Before servicing, check that the connector and terminal are connected properly.
- 3) When the electronic control P.C. board seems to be defective, check the copper foil pattern for disconnection and the components for bursting and discoloration.
- 4) Refer to 10-2 and 10-3.

10-2. FAILURE MODE RECALL FUNCTION

Outline of the function

This air conditioner can memorize the abnormal condition which has occurred once.


Even though LED indication listed on the troubleshooting check table (10-3.) disappears, the memorized failure details can be recalled.

1. Flow chart of failure mode recall function for the indoor/outdoor unit

MSZ-FE09NA
MSZ-FE12NA


MSZ-FE18NA

Operational procedure

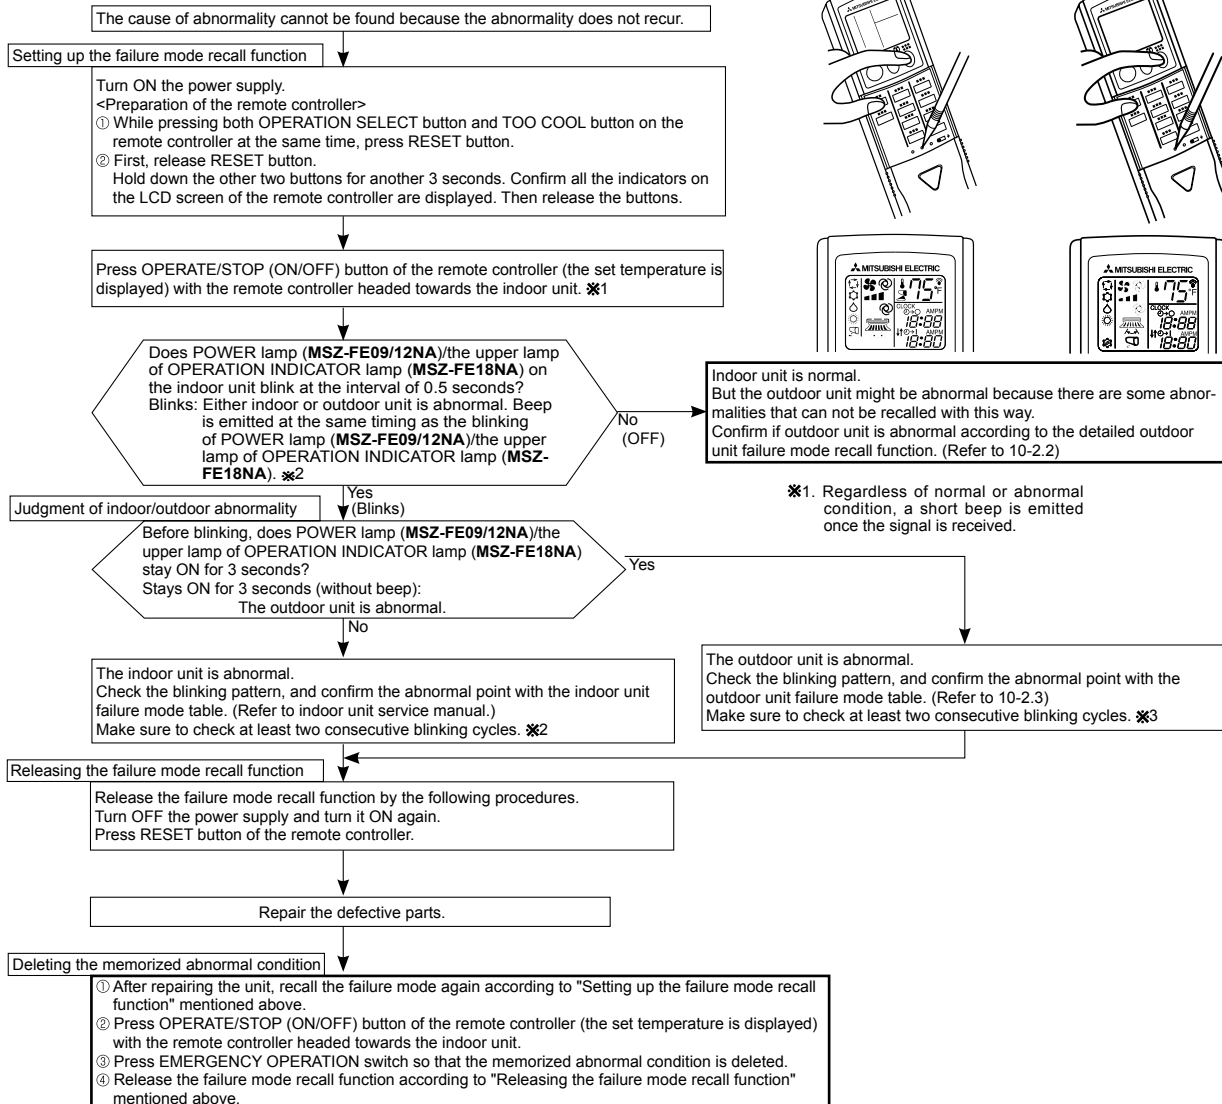


NOTE: 1. Make sure to release the failure mode recall function once it is set up, otherwise the unit cannot operate properly.
2. If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

※2. Blinking pattern when the indoor unit is abnormal:

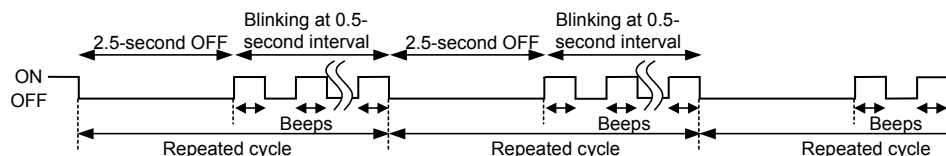


※3. Blinking pattern when the outdoor unit is abnormal:

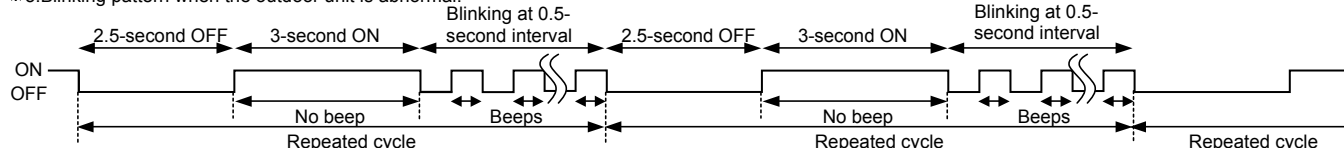


2. Flow chart of the detailed outdoor unit failure mode recall function

Operational procedure

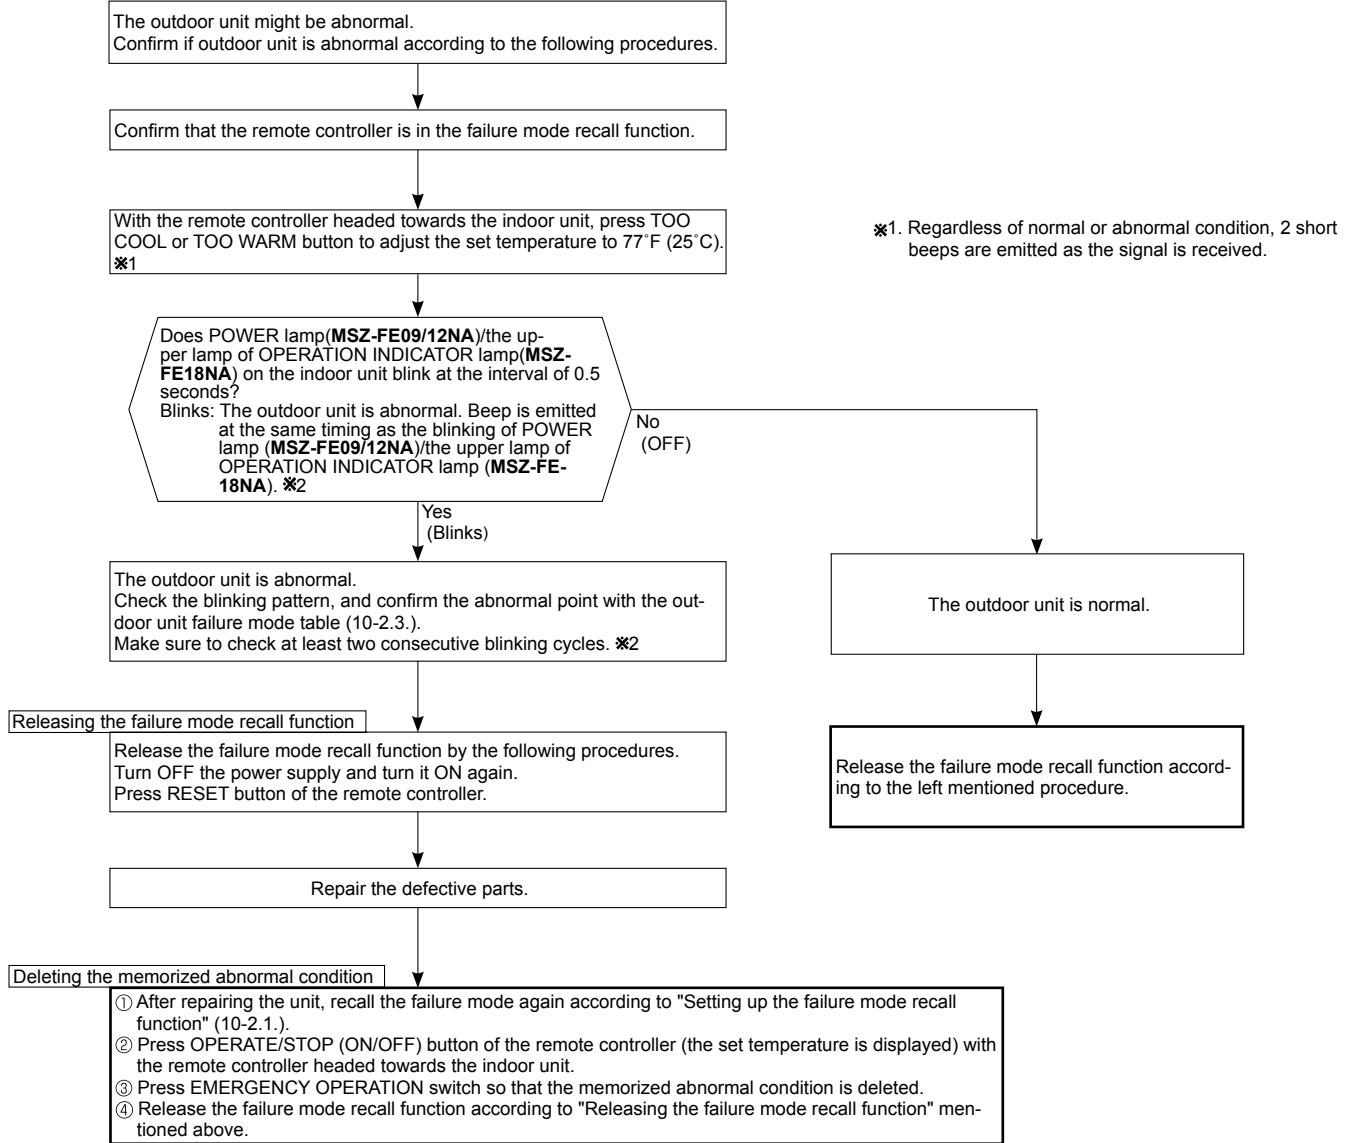

NOTE: 1. Make sure to release the failure mode recall function once it is set up, otherwise the unit cannot operate properly.
2. If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

※2. Blinking pattern when outdoor unit is abnormal:

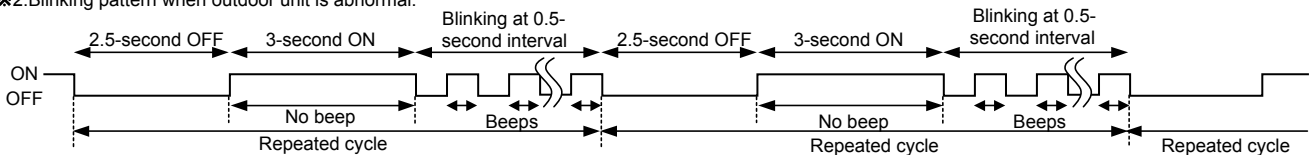

3. Outdoor unit failure mode table

OPERATION INDICATOR POWER lamp Upper lamp (Indoor unit)	Abnormal point (Failure mode/protection)	LED indication (Outdoor P.C. board)	Condition	Remedy	Indoor/ outdoor unit failure mode recall function	Outdoor unit failure mode recall function
OFF	None (Normal)	—	—	—	—	—
2-time flash 2.5 seconds OFF	Outdoor power system	—	Overcurrent cut-out operates 3 consecutive times within 1 minute after the compressor gets started.	•Reconnect connectors. •Refer to 10-5. ④"How to check inverter/compressor". •Check stop valve.	○	○
3-time flash 2.5 seconds OFF	Discharge temperature thermistor	1-time flash every 2.5 seconds	Thermistor shorts or opens during compressor running.	•Refer to 10-5. ⑥"Check of outdoor thermistors". Defective outdoor thermistors can be identified by checking the blinking pattern of LED.	○	○
	Defrost thermistor					
	Fin temperature thermistor	3-time flash 2.5 seconds OFF				
	P.C. board temperature thermistor	4-time flash 2.5 seconds OFF				
	Ambient temperature thermistor	2-time flash 2.5 seconds OFF				
4-time flash 2.5 seconds OFF	Overcurrent	11-time flash 2.5 seconds OFF	Large current flows into intelligent power module.	•Reconnect compressor connector. •Refer to 10-5. ④"How to check inverter/compressor". •Check stop valve.	—	○
	Compressor synchronous abnormality (Compressor start-up failure protection)	12-time flash 2.5 seconds OFF	Waveform of compressor current is distorted.	•Reconnect compressor connector. •Refer to 10-5. ④"How to check inverter/compressor".	—	○
5-time flash 2.5 seconds OFF	Discharge temperature	—	Temperature of discharge temperature thermistor exceeds 241°F (116°C), compressor stops. Compressor can restart if discharge temperature thermistor reads 212°F (100°C) or less 3 minutes later.	•Check refrigerant circuit and refrigerant amount. •Refer to 10-5. ③"Check of LEV".	—	○
6-time flash 2.5 seconds OFF	High pressure	—	Temperature of indoor coil thermistor exceeds 158°F (70°C) in HEAT mode. Temperature of defrost thermistor exceeds 158°F (70°C) in COOL mode.	•Check refrigerant circuit and refrigerant amount. •Check stop valve.	—	○
7-time flash 2.5 seconds OFF	Fin temperature/ P.C. board temperature	7-time flash 2.5 seconds OFF	Temperature of fin temperature thermistor on the inverter P.C. board exceeds 167 ~ 176°F (75 ~ 80°C), or temperature of P.C. board temperature thermistor on the inverter P.C. board exceeds 158 ~ 167°F (70 ~ 75°C).	•Check around outdoor unit. •Check outdoor unit air passage. •Refer to 10-5. ①"Check of outdoor fan motor".	—	○
8-time flash 2.5 seconds OFF	Outdoor fan motor	—	Outdoor fan has stopped 3 times in a row within 30 seconds after outdoor fan start-up.	•Refer to 10-5. ①"Check of outdoor fan motor". Refer to 10-5. ②"Check of inverter P.C. board".	—	○
9-time flash 2.5 seconds OFF	Nonvolatile memory data	5-time flash 2.5 seconds OFF	Nonvolatile memory data cannot be read properly.	•Replace the inverter P.C. board.	○	○
	MUZ-FE18NA Power module	6-time flash 2.5 seconds OFF	The interphase short circuit occurs in the output of the intelligent power module (IPM). The compressor winding shorts circuit.	•Refer to 10-5. ④"How to check inverter/compressor".		
10-time flash 2.5 seconds OFF	Discharge temperature	—	Temperature of discharge temperature thermistor has been 122°F (50°C) or less for 20 minutes.	•Refer to 10-5. ③"Check of LEV". •Check refrigerant circuit and refrigerant amount.	—	○
11-time flash 2.5 seconds OFF	DC voltage	8-time flash 2.5 seconds OFF	DC voltage of inverter cannot be detected normally.	•Refer to 10-5. ④"How to check inverter/compressor".	—	○
	Each phase current of compressor	9-time flash 2.5 seconds OFF	Each phase current of compressor cannot be detected normally.			
12-time flash 2.5 seconds OFF	Overcurrent Compressor open-phase	10-time flash 2.5 seconds OFF	Large current flows into intelligent power module (IPM). The open-phase operation of compressor is detected. The interphase short circuit occurs in the output of the intelligent power module (IPM). The compressor winding shorts circuit.	•Reconnect compressor connector. •Refer to 10-5. ④"How to check inverter/compressor".	—	○
14-time flash 2.5 seconds OFF	Stop valve (Closed valve)	14-time flash 2.5 seconds OFF	Closed valve is detected by compressor current.	•Check stop valve	○	○

NOTE: Blinking patterns of this mode differ from the ones of Troubleshooting check table (10-3.).

OPERATION INDICATOR
POWER lamp: **MSZ-FE09/12NA**
Upper lamp: **MSZ-FE18NA**



10-3. TROUBLESHOOTING CHECK TABLE

No.	Symptom	LED indication	Abnormal point/ Condition	Condition	Remedy
1	Outdoor unit does not operate.	1-time flash every 2.5 seconds	Outdoor power system	Overcurrent cut-out operates 3 consecutive times within 1 minute after the compressor gets started, or failure of restart of compressor has repeated 24 times.	•Reconnect connector of compressor. •Refer to 10-5.④ "How to check inverter/compressor". •Check stop valve.
2			Outdoor thermistors	Discharge temperature thermistor, fin temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor, P.C. board temperature thermistor or ambient temperature thermistor shorts or opens during compressor running.	•Refer to 10-5.⑥ "Check of outdoor thermistors".
3			Outdoor control system	Nonvolatile memory data cannot be read properly. [POWER lamp (MSZ-FE09/12NA)/the upper lamp of OPERATION INDICATOR lamp (MSZ-FE18NA) of the indoor unit lights up or flashes 7 times.]	•Replace inverter P.C. board.
4		6-time flash 2.5 seconds OFF	Serial signal	The communication fails between the indoor and outdoor unit for 3 minutes.	•Refer to 10-5.⑩ "How to check miswiring and serial signal error."
5		11-time flash 2.5 seconds OFF	Stop valve/ Closed valve	Closed valve is detected by compressor current.	•Check stop valve.
6		14-time flash 2.5 seconds OFF	Outdoor unit (Other abnormality)	Outdoor unit is defective.	•Refer to 10-2.2. "Flow chart of the detailed outdoor unit failure mode recall function".
7	'Outdoor unit stops and restarts 3 minutes later' is repeated.	2-time flash 2.5 seconds OFF	Overcurrent protection	Large current flows into intelligent power module. MUZ-FE09/12NA, MUZ-FE12NA1 ※ When overcurrent protection occurs within 10 seconds after compressor starts, compressor restarts after 15 seconds.	•Reconnect connector of compressor. •Refer to 10-5.④ "How to check inverter/compressor". •Check stop valve.
8		3-time flash 2.5 seconds OFF	Discharge temperature overheat protection	Temperature of discharge temperature thermistor exceeds 241°F (116°C), compressor stops. Compressor can restart if discharge temperature thermistor reads 212°F (100°C) or less 3 minutes later.	•Check refrigerant circuit and refrigerant amount. •Refer to 10-5.⑧ "Check of LEV".
9		4-time flash 2.5 seconds OFF	Fin temperature /P.C. board temperature thermistor overheat protection	Temperature of fin temperature thermistor on the heat sink exceeds 167 ~ 176°F (75 ~ 80°C) or temperature of P.C. board temperature thermistor on the inverter P.C. board exceeds 158 ~ 167°F (70 ~ 75°C).	•Check around outdoor unit. •Check outdoor unit air passage. •Refer to 10-5.① "Check of outdoor fan motor".
10		5-time flash 2.5 seconds OFF	High pressure protection	Temperature of indoor coil thermistor exceeds 158°F (70°C) in HEAT mode. Temperature of outdoor heat exchanger temperature thermistor exceeds 158°F (70°C) in COOL mode.	•Check refrigerant circuit and refrigerant amount. •Check stop valve.
11		8-time flash 2.5 seconds OFF	Compressor synchronous abnormality	The waveform of compressor current is distorted.	•Reconnect connector of compressor. •Refer to 10-5.④ "How to check inverter/compressor".
12		10-time flash 2.5 seconds OFF	Outdoor fan motor	Outdoor fan has stopped 3 times in a row within 30 seconds after outdoor fan start-up.	•Refer to 10-5.① "Check of outdoor fan motor." •Refer to 10-5.⑨ "Check of inverter P.C. board."
13		12-time flash 2.5 seconds OFF	Each phase current of compressor	Each phase current of compressor cannot be detected normally.	•Refer to 10-5.④ "How to check inverter/compressor".
14		13-time flash 2.5 seconds OFF	DC voltage	DC voltage of inverter cannot be detected normally.	•Refer to 10-5.④ "How to check inverter/compressor".
15		1-time flash 2.5 seconds OFF	Frequency drop by current protection	Current from power outlet is nearing Max. fuse size.	The unit is normal, but check the following.
16		3-time flash 2.5 seconds OFF	Frequency drop by high pressure protection Frequency drop by defrosting in COOL mode	Temperature of indoor coil thermistor exceeds 131°F (55°C) in HEAT mode, compressor frequency lowers. Indoor coil thermistor reads 46°F (8°C) or less in COOL mode, compressor frequency lowers.	•Check if indoor filters are clogged. •Check if refrigerant is short. •Check if indoor/outdoor unit air circulation is short cycled.
17	Outdoor unit operates.	4-time flash 2.5 seconds OFF	Frequency drop by discharge temperature protection	Temperature of discharge temperature thermistor exceeds 232°F (111°C), compressor frequency lowers.	•Check refrigerant circuit and refrigerant amount. •Refer to 10-5.⑧ "Check of LEV". •Refer to 10-5.⑥ "Check of outdoor thermistors".

NOTE: 1. The location of LED is illustrated at the right figure. Refer to 10-6.1.
2. LED is lighted during normal operation.

The flashing frequency shows the number of times the LED blinks after every 2.5-second OFF. Flashing (Example) When the flashing frequency is "2".

Inverter P.C. board (Parts side)

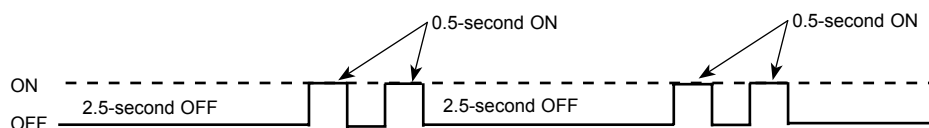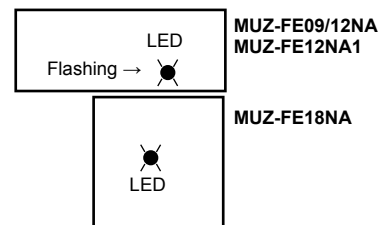



No.	Symptom	LED indication	Abnormal point/ Condition	Condition	Remedy
18	Outdoor unit operates.	7-time flash 2.5 seconds OFF	Low discharge temperature protection	Temperature of discharge temperature thermistor has been 122°F (50°C) or less for 20 minutes.	•Refer to 10-5 ⑧ "Check of LEV". •Check refrigerant circuit and refrigerant amount.
19		8-time flash 2.5 seconds OFF	MUZ-FE09/12NA MUZ-FE12NA1 PAM protection PAM: Pulse Amplitude Modulation	The overcurrent flows into IGBT (Insulated Gate Bipolar transistor: TR821) or the bus-bar voltage reaches 320 V or more, PAM stops and restarts.	This is not malfunction. PAM protection will be activated in the following cases: 1 Instantaneous power voltage drop (Short time power failure) 2 When the power supply voltage is high.
			MUZ-FE18NA Zero cross detecting circuit	Zero cross signal for PAM control cannot be detected.	
20		9-time flash 2.5 seconds OFF	Inverter check mode	The connector of compressor is disconnected, inverter check mode starts.	•Check if the connector of the compressor is correctly connected. Refer to 10-5.④ "How to check inverter/compressor".


10-4. TROUBLE CRITERION OF MAIN PARTS

MUZ-FE09NA MUZ-FE12NA MUZ-FE12NA1 MUZ-FE18NA

Part name	Check method and criterion	Figure												
Defrost thermistor (RT61)	Measure the resistance with a tester. Refer to 10-6. "Test point diagram and voltage", 1. "Inverter P.C. board", the chart of thermistor.													
Ambient temperature thermistor (RT65)														
Outdoor heat exchanger temperature thermistor (RT68)														
Discharge temperature thermistor (RT62)	Measure the resistance with a tester. Before measurement, hold the thermistor with your hands to warm it up.													
Fin temperature thermistor (RT64)	Refer to 10-6. "Test point diagram and voltage", 1. "Inverter P.C. board", the chart of thermistor.													
Compressor	Measure the resistance between terminals using a tester. (Winding temperature: -4 ~ 104°F (-20 ~ 40°C)) <table border="1"><thead><tr><th colspan="4">Normal</th></tr></thead><tbody><tr><td>U-V U-W V-W</td><td>MUZ-FE09/12NA</td><td>MUZ-FE09NA - 1 MUZ-FE12NA1</td><td>MUZ-FE18NA</td></tr><tr><td></td><td>1.52 ~ 2.17 Ω</td><td>0.78 ~ 1.11 Ω</td><td>0.83 ~ 1.18 Ω</td></tr></tbody></table>	Normal				U-V U-W V-W	MUZ-FE09/12NA	MUZ-FE09NA - 1 MUZ-FE12NA1	MUZ-FE18NA		1.52 ~ 2.17 Ω	0.78 ~ 1.11 Ω	0.83 ~ 1.18 Ω	
Normal														
U-V U-W V-W	MUZ-FE09/12NA	MUZ-FE09NA - 1 MUZ-FE12NA1	MUZ-FE18NA											
	1.52 ~ 2.17 Ω	0.78 ~ 1.11 Ω	0.83 ~ 1.18 Ω											
Outdoor fan motor	Measure the resistance between lead wires using a tester. (Part temperature: -4 ~ 104°F (-20 ~ 40°C)) <table border="1"><thead><tr><th>Color of lead wire</th><th>Normal</th></tr></thead><tbody><tr><td>RED – BLK BLK – WHT WHT – RED</td><td>11 ~ 16 Ω</td></tr></tbody></table>	Color of lead wire	Normal	RED – BLK BLK – WHT WHT – RED	11 ~ 16 Ω									
Color of lead wire	Normal													
RED – BLK BLK – WHT WHT – RED	11 ~ 16 Ω													
R. V. coil (21S4)	Measure the resistance using a tester. (Part temperature: 14 ~ 104°F (-10 ~ 40°C)) <table border="1"><thead><tr><th>Normal</th></tr></thead><tbody><tr><td>0.97 ~ 1.38 kΩ</td></tr></tbody></table>	Normal	0.97 ~ 1.38 kΩ											
Normal														
0.97 ~ 1.38 kΩ														
Expansion valve coil (LEV)	Measure the resistance using a tester. (Part temperature: 14 ~ 104°F (-10 ~ 40°C)) <table border="1"><thead><tr><th>Color of lead wire</th><th>Normal</th></tr></thead><tbody><tr><td>WHT – RED</td><td rowspan="4">37 ~ 54 Ω</td></tr><tr><td>RED – ORN</td></tr><tr><td>YLW – BRN</td></tr><tr><td>BRN – BLU</td></tr></tbody></table>	Color of lead wire	Normal	WHT – RED	37 ~ 54 Ω	RED – ORN	YLW – BRN	BRN – BLU						
Color of lead wire	Normal													
WHT – RED	37 ~ 54 Ω													
RED – ORN														
YLW – BRN														
BRN – BLU														

10-5. TROUBLESHOOTING FLOW

Ⓐ How to check inverter/compressor

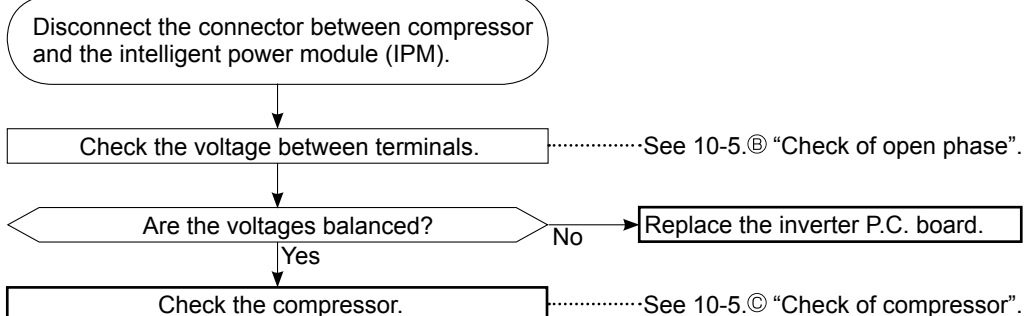

Ⓑ Check of open phase

- With the connector between the compressor and the intelligent power module disconnected, activate the inverter and check if the inverter is normal by measuring **the voltage balance** between the terminals.

Output voltage is 50 - 130 V. (The voltage may differ according to the tester.)

<< Operation method>>

Start cooling or heating operation by pressing EMERGENCY OPERATION switch on the indoor unit. (TEST RUN OPERATION: Refer to 7-6.)

<<Measurement point>>

at 3 points

BLK (U) - WHT (V)


BLK (U) - RED (W)

WHT(V) - RED (W)

Measure AC voltage between the lead wires at 3 points.

- NOTE:**
- Output voltage varies according to power supply voltage.
 - Measure the voltage by analog type tester.
 - During this check, LED of the inverter P.C. board flashes 9 times. (Refer to 10-6.1.)

Ⓒ Check of compressor

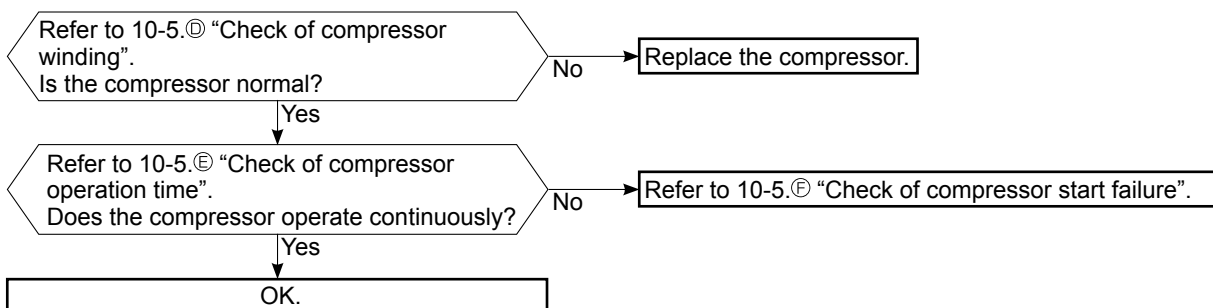

D Check of compressor winding

- Disconnect the connector between the compressor and intelligent power module, and measure the resistance between the compressor terminals.

<<Measurement point>>

at 3 points

BLK - WHT

BLK - RED

WHT - RED

※ Measure the resistance between the lead wires at 3 points.

<<Judgement>>

Refer to 10-4.

0[Ω] Abnormal [short]

Infinite [Ω] Abnormal [open]

NOTE: Be sure to zero the ohmmeter before measurement.

E Check of compressor operation time

- Connect the compressor and activate the inverter. Then measure the time until the inverter stops due to over current.

<<Operation method>>


Start heating or cooling operation by pressing EMERGENCY OPERATION switch on the indoor unit.

(TEST RUN OPERATION: Refer to 7-6.)

<<Measurement>>

Measure the time from the start of compressor to the stop of compressor due to overcurrent.

<<Judgement>>

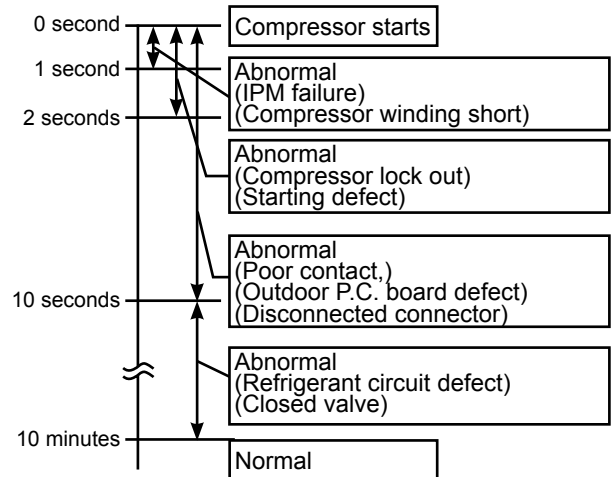

F Check of compressor start failure

Confirm that 1~4 is normal.

- Electrical circuit check

1. Contact of the compressor connector

2. Output voltage of inverter P.C. board and balance of them (See 10-5.⑥)

3. Direct current voltage between DB61(+) and (-) (**MUZ-FE09/12NA, MUZ-FE12NA1**)/JP715(+) and JP30(-) (**MUZ-FE18NA**) on the inverter P.C. board

4. Voltage between outdoor terminal block S1-S2

Does the compressor run for 10 seconds or more after it starts?

Yes

Check the refrigerant circuit.
Check the stop valve.

No

After the compressor is heated with a drier, does the compressor start? ※1

No

Replace the compressor.

Yes

Compressor start failure. Activate pre-heat control.
(Refer to 9-2. "PRE-HEAT CONTROL SETTING")



※1
Heat the compressor with a drier for about 20 minutes.
Do not recover refrigerant gas while heating.

G Check of outdoor thermistors

Disconnect the connector of thermistor in the outdoor P.C. board (see below table), and measure the resistance of thermistor.

Is the thermistor normal? (Refer to 10-6.1.)

Yes

No

Replace the thermistor except RT64. When RT64 is abnormal, replace the inverter P.C. board.

Reconnect the connector of thermistor.
Turn ON the power supply and press EMERGENCY OPERATION switch.

Does the unit operate for 10 minutes or more without showing thermistor abnormality?

No

Replace the inverter P.C. board.

Yes

OK. (Cause is poor contact.)

MUZ-FE09NA MUZ-FE12NA MUZ-FE12NA1

Thermistor	Symbol	Connector, Pin No.	Board
Defrost	RT61	Between CN641 pin1 and pin2	Inverter P.C. board
Discharge temperature	RT62	Between CN641 pin3 and pin4	
Fin temperature	RT64	Between CN642 pin1 and pin2	
Ambient temperature	RT65	Between CN643 pin1 and pin2	
Outdoor heat exchanger temperature	RT68	Between CN644 pin1 and pin3	

MUZ-FE18NA

Thermistor	Symbol	Connector, Pin No.	Board
Defrost	RT61	Between CN671 pin1 and pin2	Inverter P.C. board
Discharge temperature	RT62	Between CN671 pin3 and pin4	
Fin temperature	RT64	Between CN673 pin1 and pin2	
Ambient temperature	RT65	Between CN672 pin1 and pin2	
Outdoor heat exchanger temperature	RT68	Between CN671 pin5 and pin6	

H Check of R.V. coil

* First of all, measure the resistance of R.V. coil to check if the coil is defective. Refer to 10-4.

* In case CN721 (MUZ-FE09/12NA, MUZ-FE12NA1)/CN602 (MUZ-FE18NA) is disconnected or R.V. coil is open, voltage is generated between the terminal pins of the connector although no signal is being transmitted to R.V. coil.

Check if CN721 (MUZ-FE09/12NA, MUZ-FE12NA1)/CN602 (MUZ-FE18NA) is connected.

Unit operates COOL mode even if it is set to HEAT mode.

Disconnect connector between the compressor and the intelligent power module.
Turn ON the power supply and press EMERGENCY OPERATION switch twice (HEAT mode).

Is there 208/230 VAC between CN721 (MUZ-FE09/12NA, MUZ-FE12NA1)/CN602 (MUZ-FE18NA) ① and ② on the inverter P.C. board 3 minutes after the power supply is turned ON?

No

Replace the inverter P.C. board.

Yes

Replace the 4-way valve.

Unit operates HEAT mode even if it is set to COOL mode.

Disconnect connector between the compressor and the intelligent power module.
Turn ON the power supply and press EMERGENCY OPERATION switch once (COOL mode).

Is there 208/230 VAC between CN721 (MUZ-FE09/12NA, MUZ-FE12NA1)/CN602 (MUZ-FE18NA) ① and ② on the inverter P.C. board 3 minutes after the power supply is turned ON?

Yes

Replace the inverter P.C. board.

No

Replace the 4-way valve.

① Check of outdoor fan motor

MUZ-FE09NA MUZ-FE12NA MUZ-FE12NA1

Disconnect CN932 from the inverter P.C. board, and measure the resistance of the outdoor fan motor.

Is the outdoor fan motor normal?
(Refer to 10-4.)

No

Replace the outdoor fan motor.

Yes

Replace the inverter P.C. board.

MUZ-FE18NA

Disconnect the connectors CN931 and CN932 from the inverter P.C. board.
Check the connection between the connector CN931 and CN932.

Is the resistance between each terminal of outdoor fan motor normal?
(Refer to 10-4.)

Yes

No

Disconnect CN932 from the inverter P.C. board, and turn on the power supply.

Rotate the outdoor fan motor manually and measure the voltage of CN931.
Between 1(+) and 5(-)
Between 2(+) and 5(-)
Between 3(+) and 5(-)

(Fixed to either 5 or 0 VDC)

No

Does the voltage between each terminal become 5 and 0 VDC repeatedly?

Yes

No

Does the outdoor fan motor rotate smoothly?


Yes

Replace the outdoor fan motor.


Replace the inverter P.C. board.

J Check of power supply

MUZ-FE09NA MUZ-FE12NA MUZ-FE12NA1

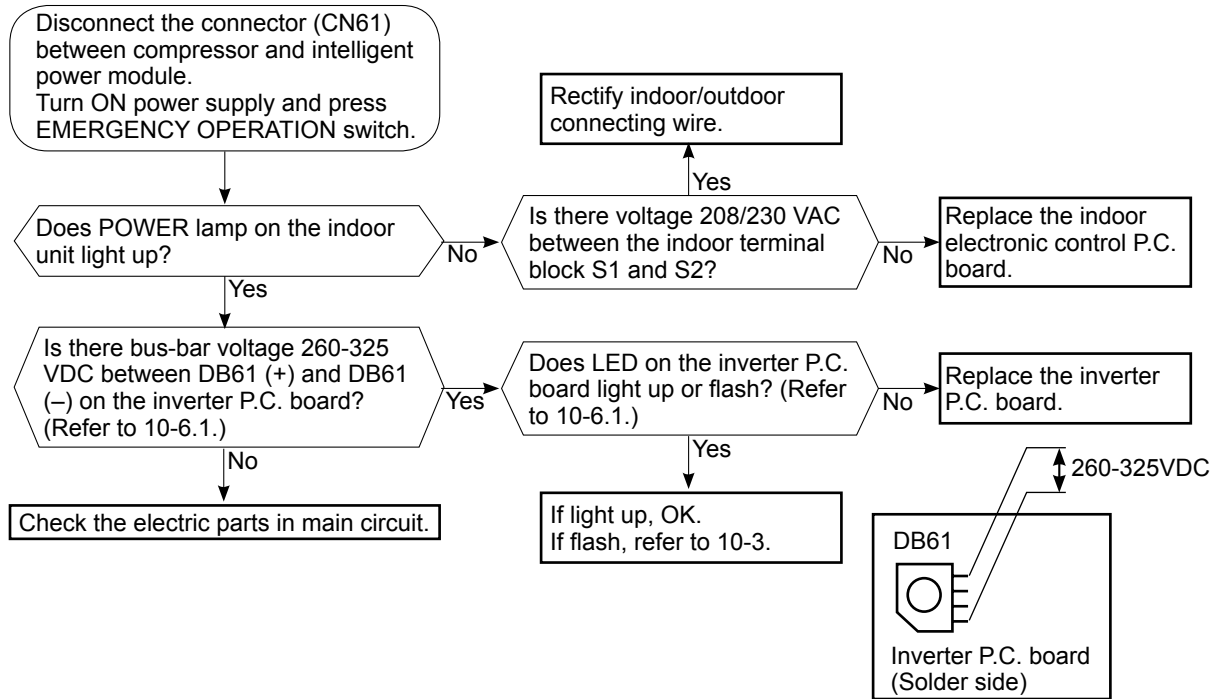

MUZ-FE18NA

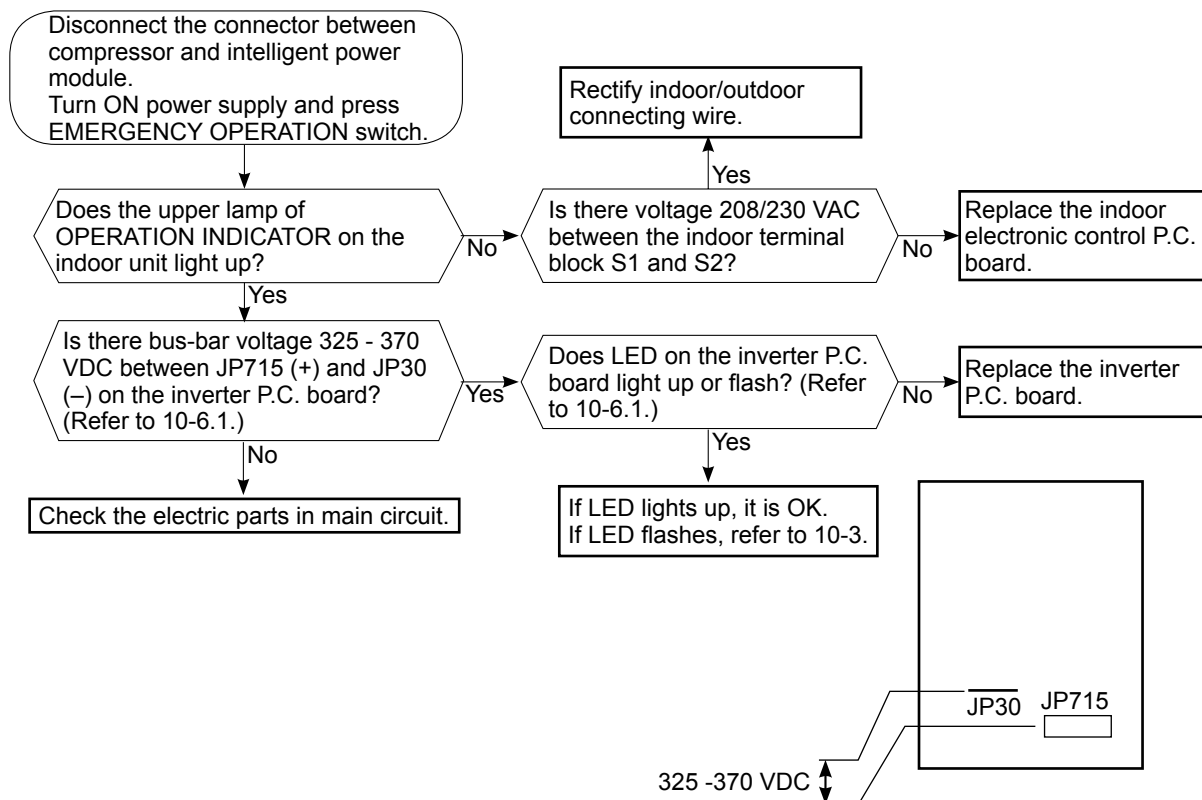

K Check of LEV (Expansion valve)

Turn ON the power supply.

<Preparation of the remote controller>

- ① While pressing both OPERATION SELECT button and TOO COOL button on the remote controller at the same time, press RESET button.
- ② First, release RESET button.
And release the other two buttons after all LCD except the set temperature in operation display section of the remote controller is displayed after 3 seconds.

Press OPERATE/STOP (ON/OFF) button of the remote controller (the set temperature is displayed) with the remote controller headed towards the indoor unit. ※1

Expansion valve operates in full-opening direction.

Do you hear the expansion valve "click, click....."?
Do you feel the expansion valve vibrate on touching it?

Yes → OK.

No

Is LEV coil properly fixed to the expansion valve?

No

Properly fix the LEV coil to the expansion valve.

Yes

Does the resistance of LEV coil have the characteristics? (Refer to 10-4.)

Yes

Measure each voltage between connector pins of CN724 on the inverter P.C. board.
1. Pin③(-) — Pin①(+)
2. Pin④(-) — Pin①(+)
3. Pin⑤(-) — Pin①(+)
4. Pin⑥(-) — Pin①(+)
Is there about 3 ~ 5 VAC between each?
NOTE: Measure the voltage by an analog tester.

No

Replace the inverter P.C. board.



No

Replace the LEV coil.



Yes

Replace the expansion valve.

MSZ-FE09NA
MSZ-FE12NA

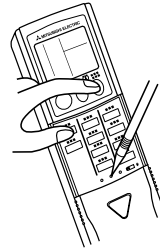

MSZ-FE18NA

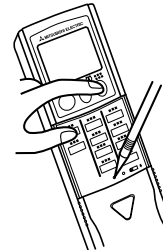


※1. Regardless of normal or abnormal condition, a short beep is emitted once the signal is received.



NOTE: After check of LEV, do the undermentioned operations.

1. Turn OFF the power supply and turn ON it again.
2. Press RESET button on the remote controller.


L Check of inverter P.C. board

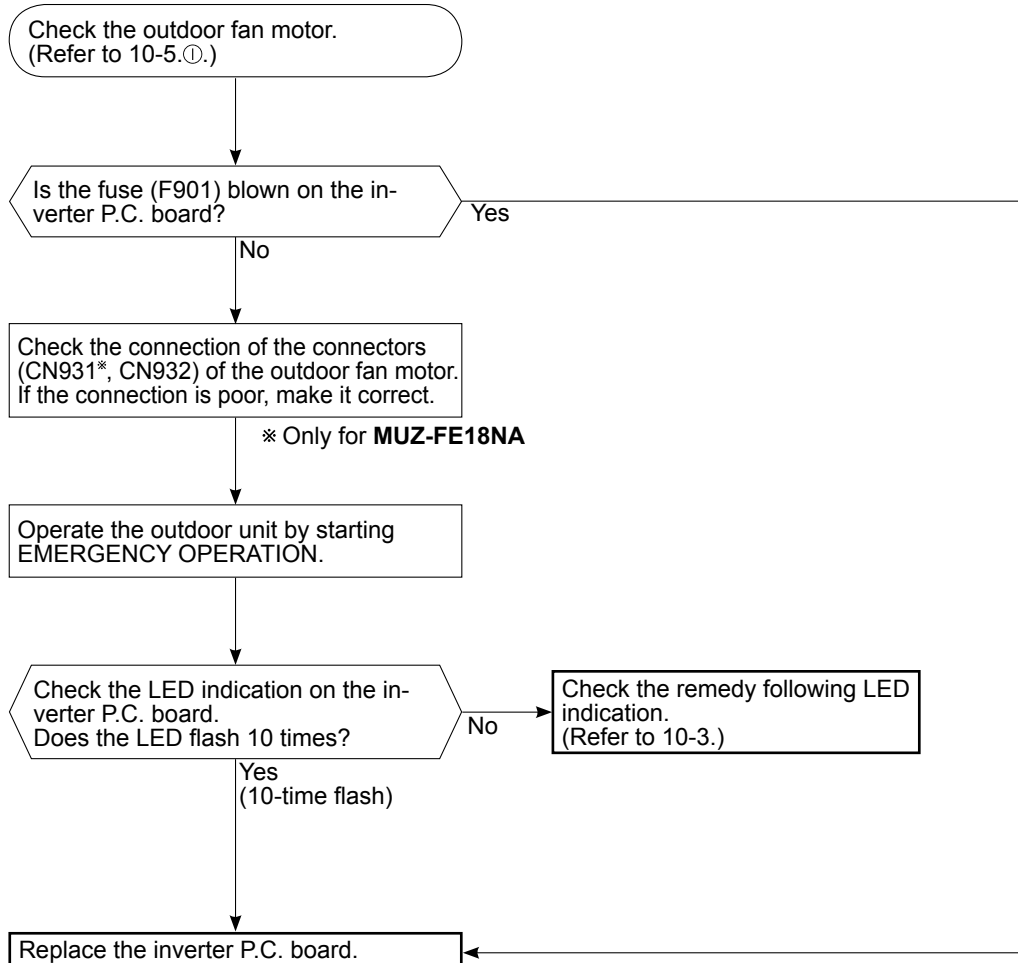

M How to check miswiring and serial signal error

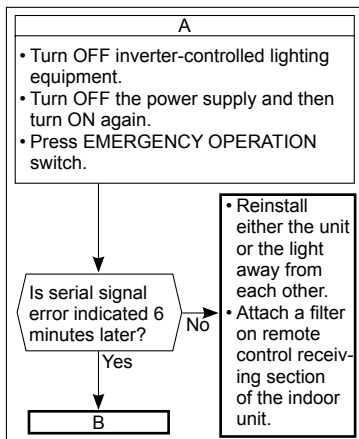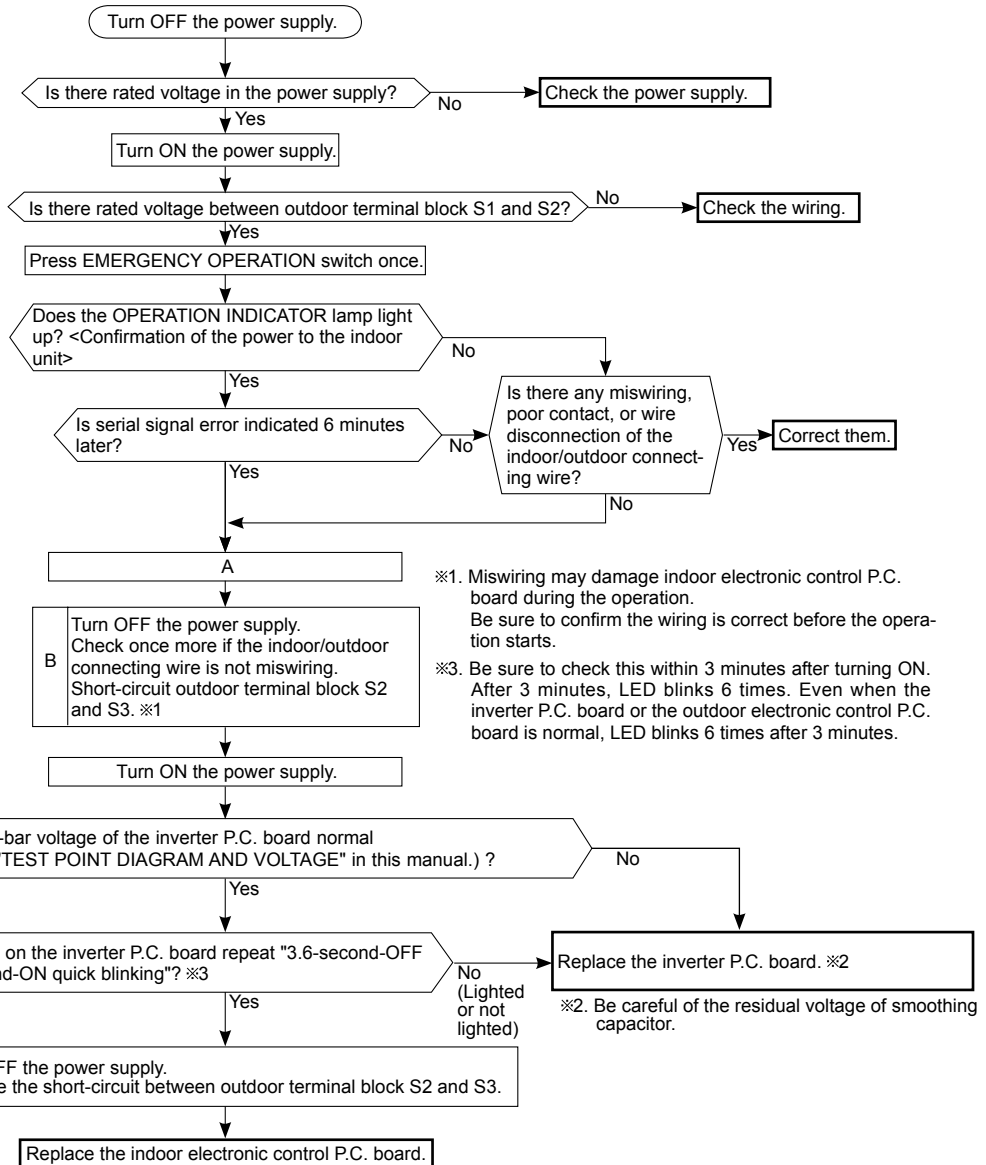


N Electromagnetic noise enters into TV sets or radios

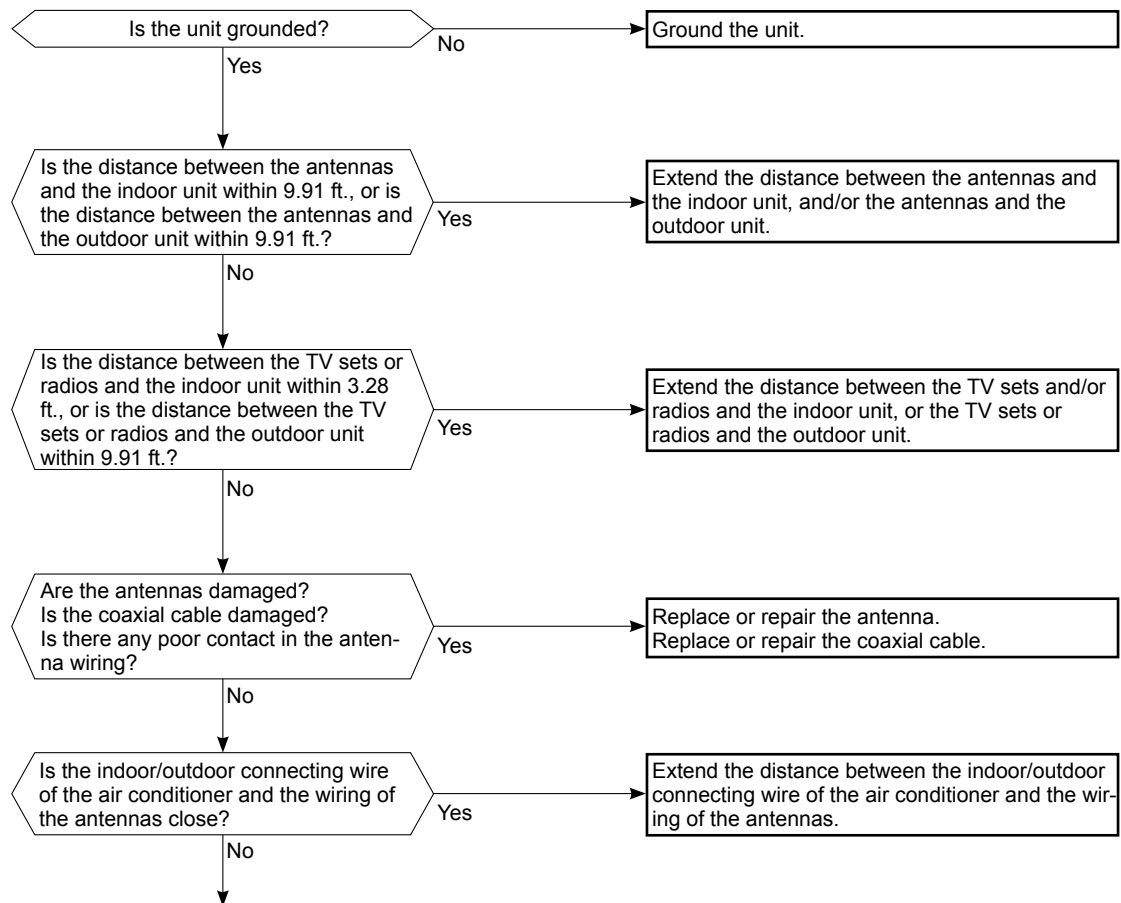




10-6. TEST POINT DIAGRAM AND VOLTAGE

1. Inverter P.C. board


MUZ-FE09NA MUZ-FE12NA MUZ-FE12NA1

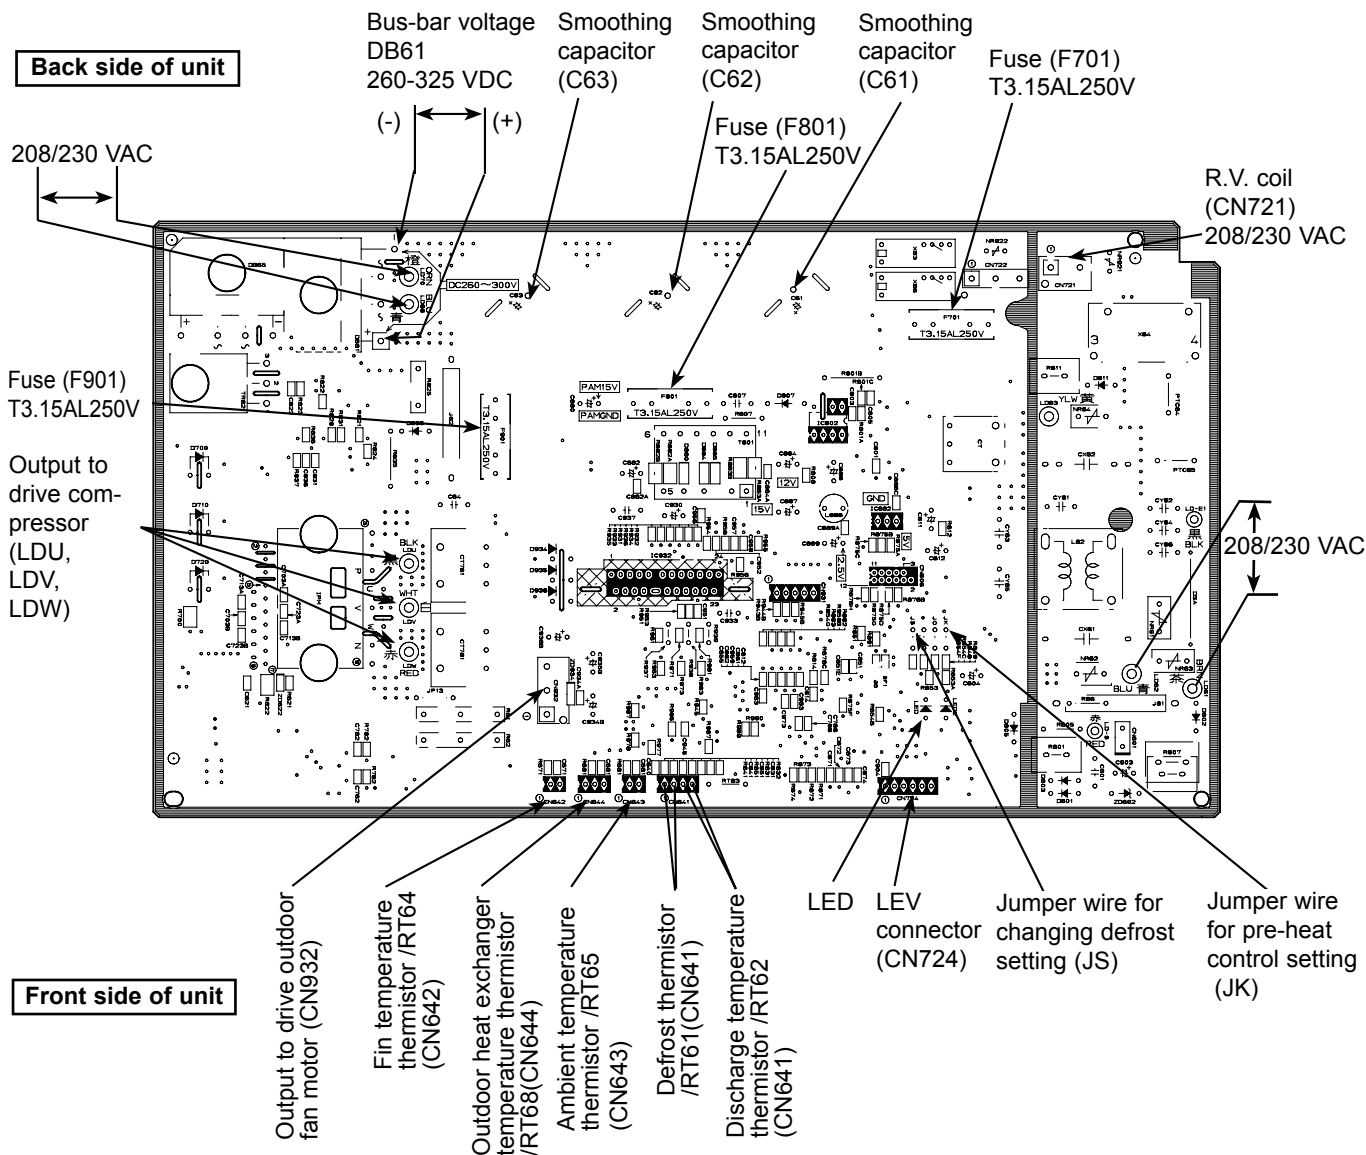




Defrost thermistor (RT61)
Ambient temperature thermistor (RT65)
Outdoor heat exchanger temperature thermistor (RT68)

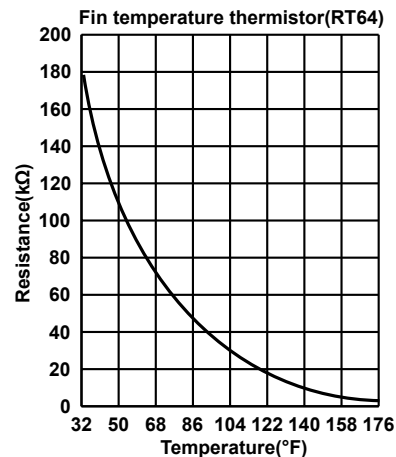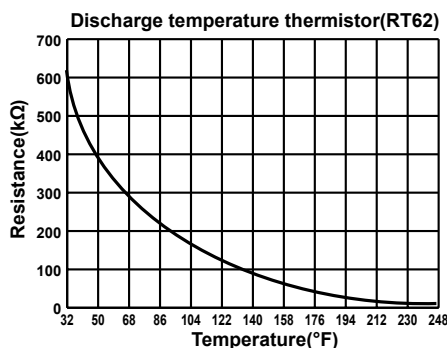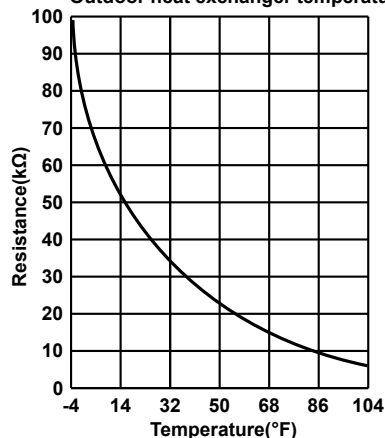

MUZ-FE18NA

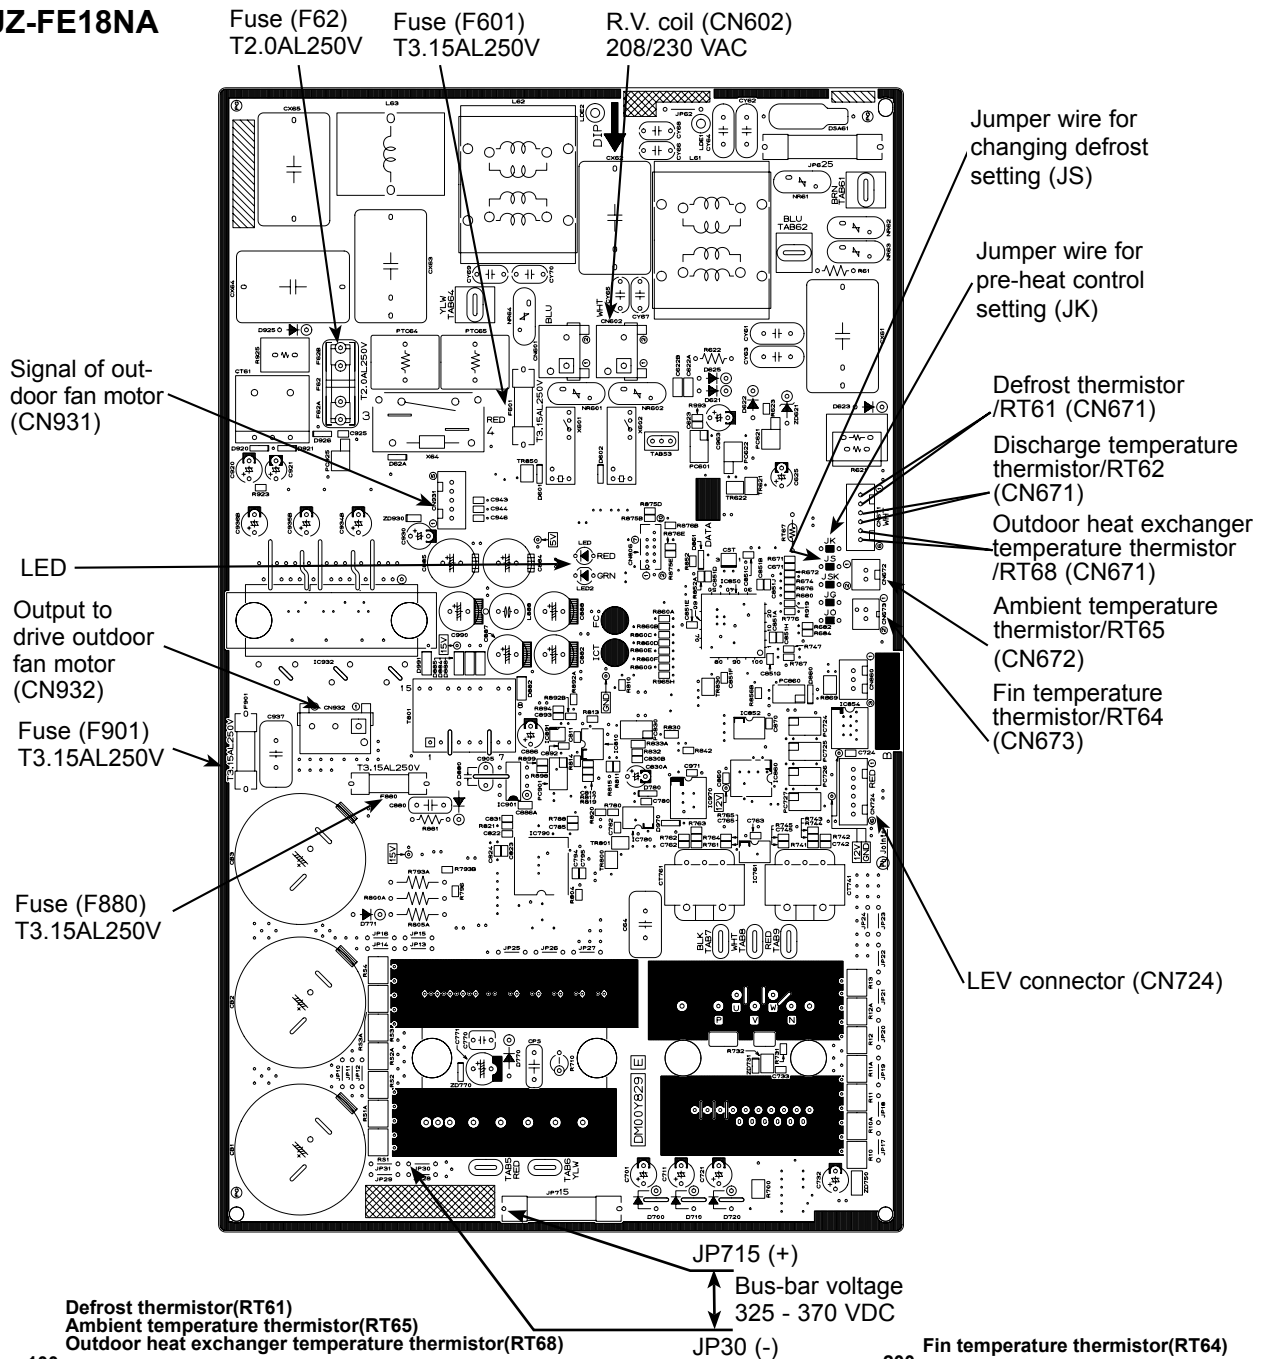

Defrost thermistor(RT61)
Ambient temperature thermistor(RT65)
Outdoor heat exchanger temperature thermistor(RT68)

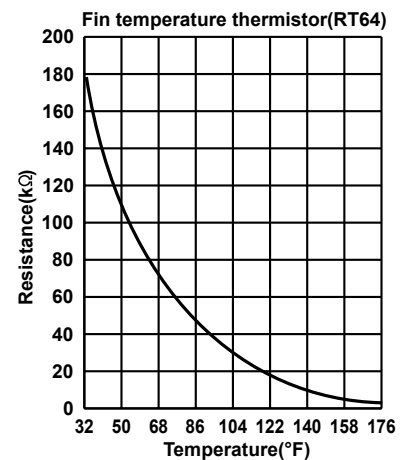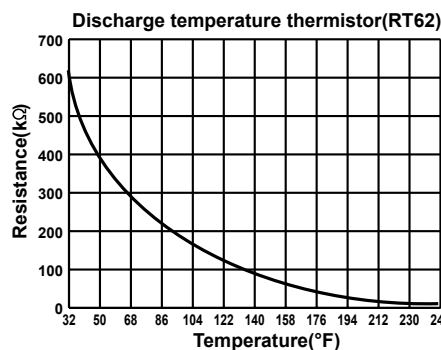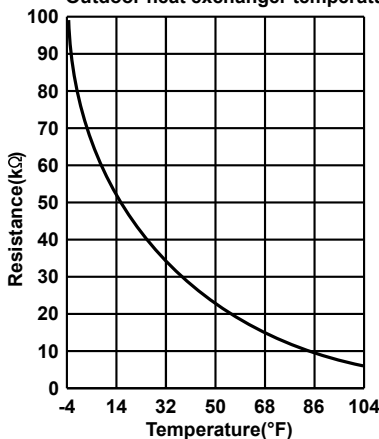

<"Terminal with locking mechanism" Detaching points>


The terminal which has the locking mechanism can be detached as shown below.

There are two types (refer to (1) and (2)) of the terminal with locking mechanism.


The terminal without locking mechanism can be detached by pulling it out.

Check the shape of the terminal before detaching.

(1) Slide the sleeve and check if there is a locking lever or not.

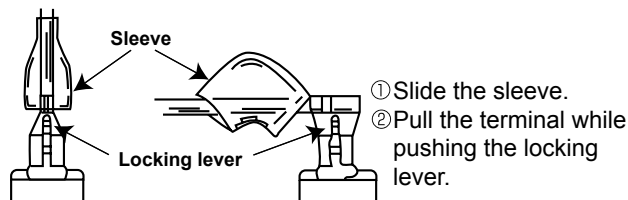




(2) The terminal with this connector has the locking mechanism.

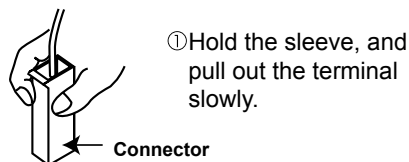

11-1. MUZ-FE09NA MUZ-FE12NA MUZ-FE12NA1

NOTE: Turn OFF power supply before disassembly.

OPERATING PROCEDURE	PHOTOS
1. Removing the cabinet (1) Remove the screw fixing the service panel. (2) Pull down the service panel and remove it. (3) Remove the screws fixing the conduit cover. (4) Remove the conduit cover. (5) Disconnect the power supply wire and indoor/outdoor connecting wire. (6) Remove the screws fixing the top panel. (7) Remove the top panel. (8) Remove the screws fixing the cabinet. (9) Remove the cabinet. (10) Remove the screws fixing the back panel. (11) Remove the back panel. Photo 2	Photo 1 Photo 3

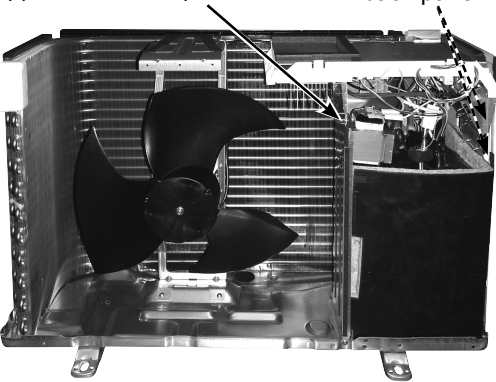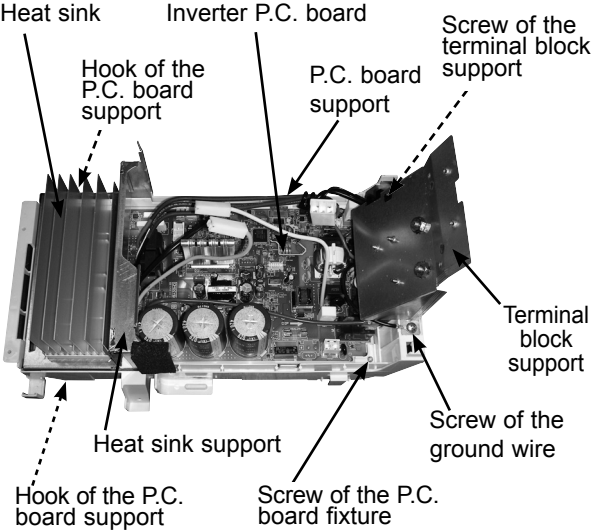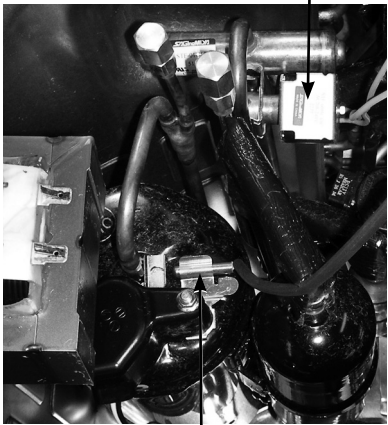OPERATING PROCEDURE	PHOTOS
2. Removing the inverter assembly, inverter P.C. board (1) Remove the cabinet and panels. (Refer to 1.) (2) Disconnect the lead wire to the reactor and the following connectors: <Inverter P.C. board> CN721 (R.V.coil) CN932 (Fan motor) CN641 (Defrost thermistor and discharge temperature thermistor) CN643 (Ambient temperature thermistor) CN644 (Outdoor heat exchanger temperature thermistor) CN724 (LEV) (3) Remove the compressor connector (CN61). (4) Remove the screws fixing the heat sink support and the separator. (5) Remove the fixing screws of the terminal block support and the back panel. (6) Remove the inverter assembly. (7) Remove the screw of the ground wire and screw of the terminal block support. (8) Remove the heat sink support from the P.C. board support. (9) Remove the screw of the inverter P.C. board and remove the inverter P.C. board from the P.C. board support.	Photo 4 Screws of the heat sink support and the separator Screws of the terminal block support and the back panel  Photo 5 (Inverter assembly) Heat sink Inverter P.C. board Hook of the P.C. board support P.C. board support Screw of the terminal block support Terminal block support Heat sink support Hook of the P.C. board support Screw of the ground wire Screw of the P.C. board fixture 
3. Removing R.V. coil (1) Remove the cabinet and panels. (Refer to 1.) (2) Disconnect the following connectors: <Inverter P.C. board> CN721 (R.V. coil) (3) Remove the R.V. coil.	Photo 6 R.V. coil Discharge temperature thermistor 

OPERATING PROCEDURE

4. Removing the discharge temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor and ambient temperature thermistor.

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Disconnect the lead wire to the reactor and the following connectors:
<Inverter P.C. board>
CN641 (Defrost thermistor and discharge temperature thermistor)
CN643 (Ambient temperature thermistor)
CN644 (Outdoor heat exchanger temperature thermistor)
- (3) Pull out the discharge temperature thermistor from its holder. (Photo 6)
- (4) Pull out the defrost thermistor from its holder.
- (5) Pull out the outdoor heat exchanger temperature thermistor from its holder.
- (6) Pull out the ambient temperature thermistor from its holder.

5. Removing outdoor fan motor

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Disconnect the connectors for outdoor fan motor.
- (3) Remove the propeller nut.
- (4) Remove the propeller.
- (5) Remove the screws fixing the fan motor.
- (6) Remove the fan motor.

6. Removing the compressor and 4-way valve

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Remove the inverter assembly. (Refer to 2.)
- (3) Recover gas from the refrigerant circuit.
NOTE: Recover gas from the pipes until the pressure gauge shows 0 PSIG.
- (4) Detach the brazed part of the suction and the discharge pipes connected with compressor.
- (5) Remove the nuts of compressor legs.
- (6) Remove the compressor.
- (7) Detach the brazed part of pipes connected with 4-way valve.

PHOTOS

Photo 7

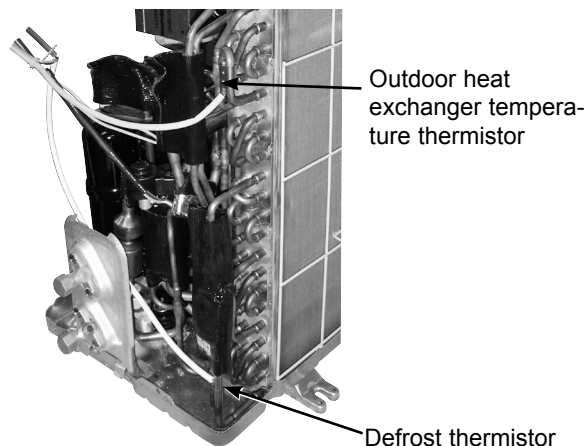


Photo 8

Screws of the outdoor fan motor

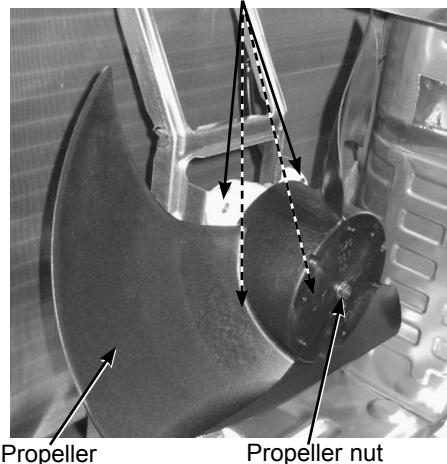


Photo 9



Brazed parts of 4-way valve

11-2. MUZ-FE18NA


NOTE: Turn OFF power supply before disassembly.

OPERATING PROCEDURE

1. Removing the cabinet

- (1) Remove the screws of the service panel.
- (2) Remove the screws of the top panel.
- (3) Remove the screw of the valve cover.
- (4) Remove the service panel.
- (5) Remove the screws fixing the conduit cover.
- (6) Remove the conduit cover.
- (7) Remove the top panel.
- (8) Remove the valve cover.
- (9) Disconnect the power supply and indoor/outdoor connecting wire.
- (10) Remove the screws of the cabinet.
- (11) Remove the cabinet.
- (12) Remove the screws of the back panel.
- (13) Remove the back panel.

Photo 2

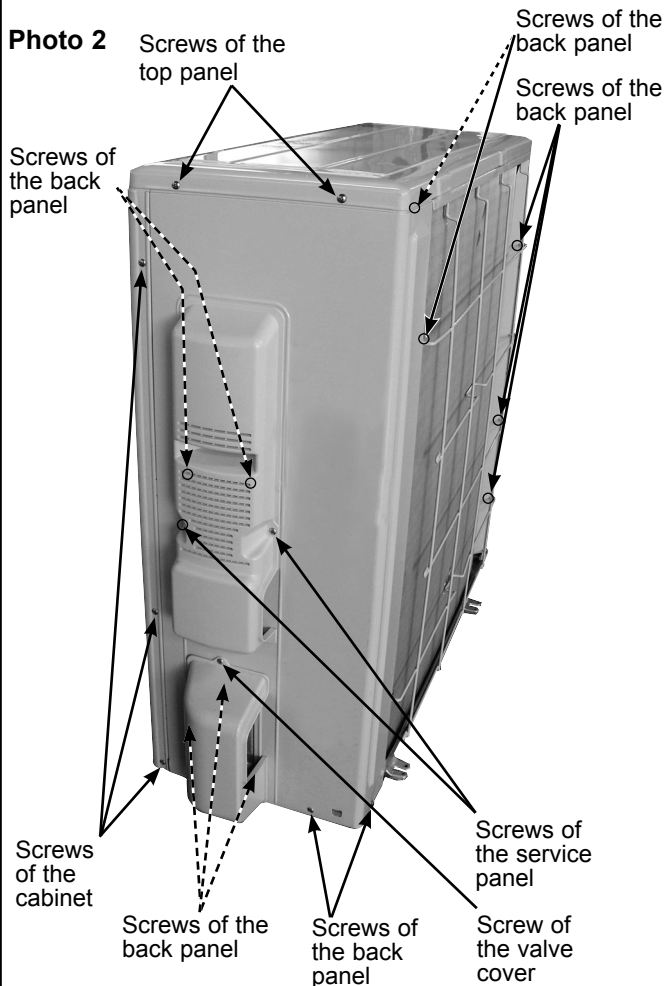

PHOTOS

Photo 1


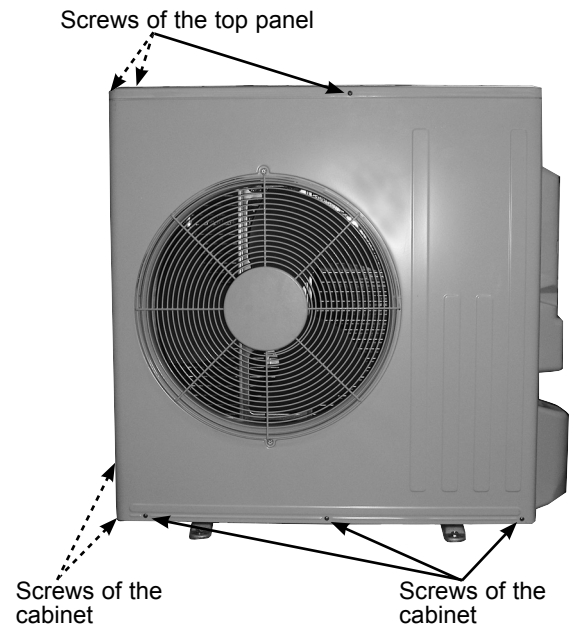


Photo 3

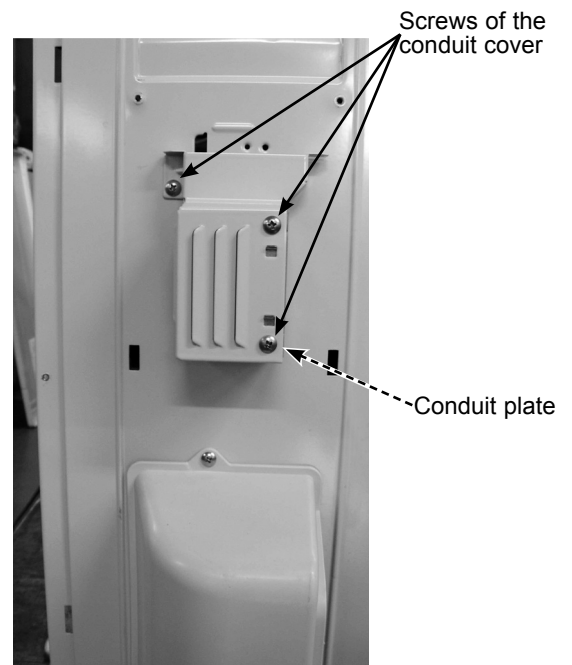

OPERATING PROCEDURE

2. Removing the inverter assembly, inverter P.C. board

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Disconnect the lead wire to the reactor and the following connectors:
<Inverter P.C. board>
CN602 (R.V. coil)
CN931, CN932 (Fan motor)
CN671 (Defrost thermistor, discharge temperature thermistor and outdoor heat exchanger temperature thermistor)
CN672 (Ambient temperature thermistor)
CN724 (LEV)
- (3) Remove the compressor connector.
- (4) Remove the screws fixing the relay panel.
- (5) Remove the relay panel.
- (6) Remove the earth wires and the lead wires of the inverter P.C. board.
- (7) Remove the screw of the PB support.
- (8) Remove the inverter P.C. board from the relay panel.

3. Removing R.V. coil

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Disconnect the following connector:
<Inverter P.C. board>
CN602 (R.V. coil)
- (3) Remove the R.V. coil.

PHOTOS

Photo 4





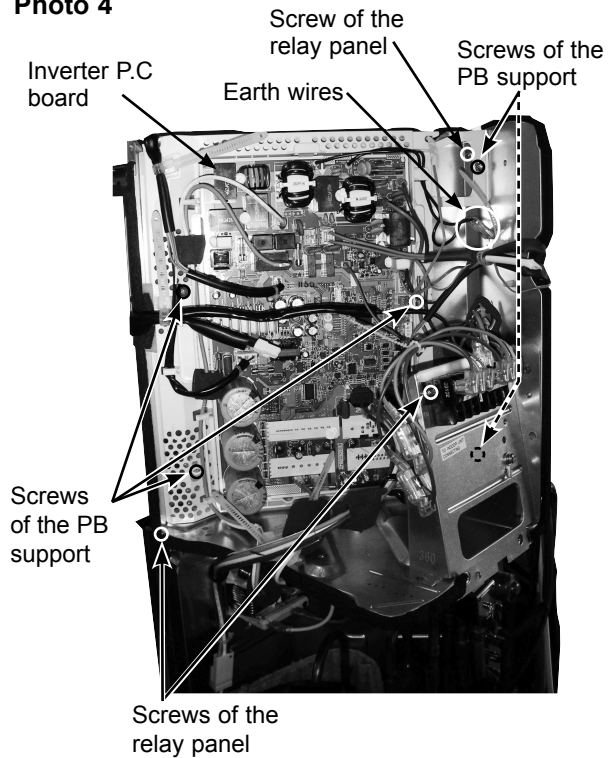


Photo 5

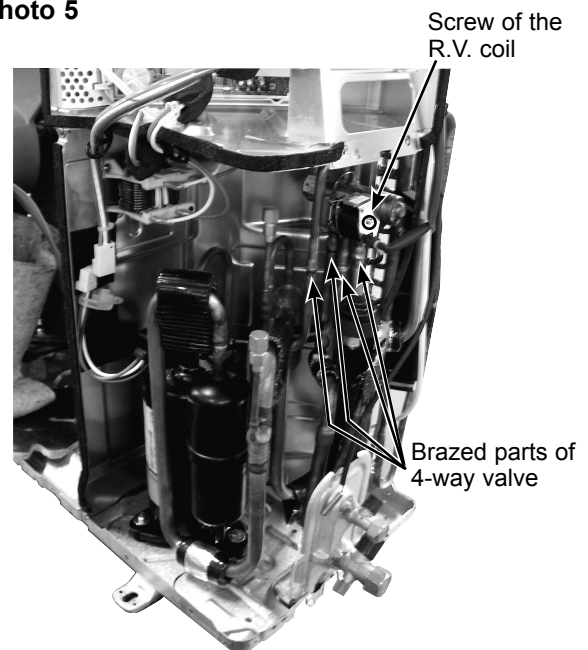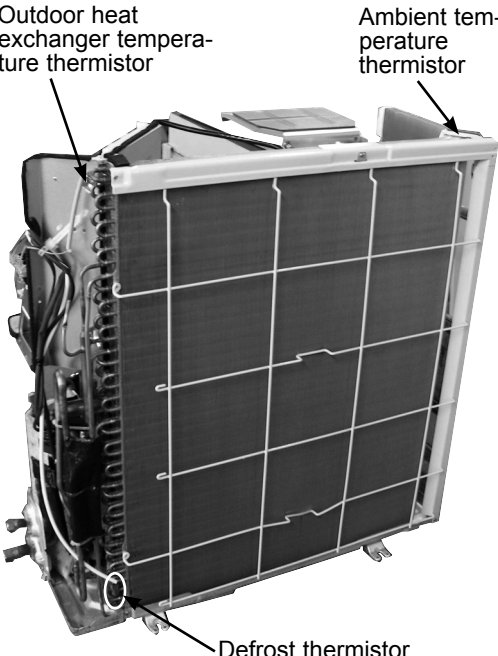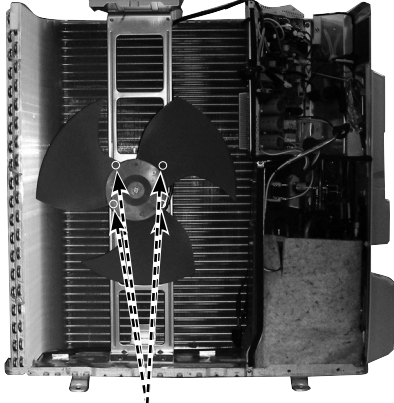

OPERATING PROCEDURE	PHOTOS
4. Removing the discharge temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor and ambient temperature thermistor (1) Remove the cabinet and panels. (Refer to 1.) (2) Disconnect the lead wire to the reactor and the following connectors: <Inverter P.C. board> CN671 (Defrost thermistor, discharge temperature thermistor and outdoor heart exchanger temperature thermistor) CN672 (Ambient temperature thermistor) (3) Pull out the discharge temperature thermistor from its holder. (Photo 8) (4) Pull out the defrost thermistor from its holder. (5) Pull out the outdoor heat exchanger temperature thermistor from its holder. (6) Pull out the ambient temperature thermistor from its holder.	Photo 6  Outdoor heat exchanger temperature thermistor Ambient temperature thermistor Defrost thermistor
5. Removing outdoor fan motor (1) Remove the top panel, cabinet and service panel. (Refer to 1.) (2) Disconnect the following connectors: <Inverter P.C. board> CN931 and CN932 (Fan motor) (3) Remove the propeller. (4) Remove the screws fixing the fan motor. (5) Remove the fan motor.	Photo 7  Screws of the outdoor fan motor
6. Removing the compressor and 4-way valve (1) Remove the top panel, cabinet and service panel. (Refer to 1.) (2) Remove the back panel. (Refer to 1.) (3) Remove the inverter assembly. (Refer to 2.) (4) Recover gas from the refrigerant circuit. NOTE: Recover gas from the pipes until the pressure gauge shows 0 kg/cm² (0 MPa). (5) Detach the brazed part of the suction and the discharge pipes connected with compressor. (6) Remove the compressor nuts. (7) Remove the compressor. (8) Detach the brazed parts of 4-way valve and pipes. (Photo 5)	Photo 8  Brazed part of the discharge pipe Discharge temperature thermistor Brazed part of the suction pipe

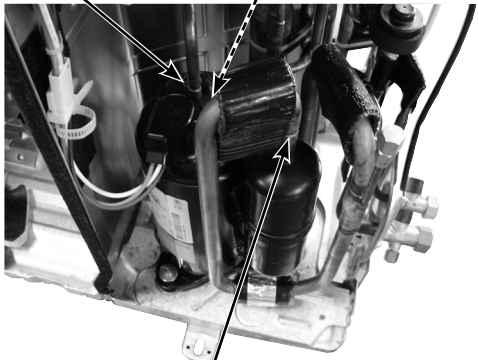

© Copyright 2009 MITSUBISHI ELECTRIC CO.,LTD
Distributed in Apr. 2011. No. OBH543 REVISED EDITION-B
Distributed in Sep. 2010. No. OBH543 REVISED EDITION-A 5
Distributed in Jul. 2009. No. OBH543 5
Made in Japan

New publication, effective Apr. 2011
Specifications subject to change without notice.